

RYDEEN[®]

find your road

■ BB-411PM



■ BL-412PM



■ BL-422P



■ SPK-001



■ LED-001



BL-422P
BL-412PM
BB-411PM
SPK-001
LED-001

Owner's Manual


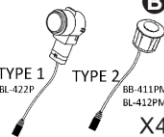

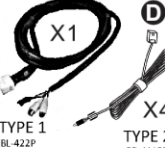



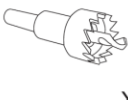
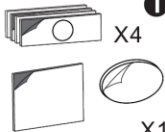

Ultrasonic Parking Sensor Systems

v1.0

⚠ WARNINGS ⚠

- **THE FOLLOWING INSTRUCTIONS ARE INTENDED FOR AUTHORIZED RYDEEN MOBILE INSTALLERS ONLY.**
- **PROFESSIONAL INSTALLATION BY AUTHORIZED RYDEEN RETAILER REQUIRED TO BE COVERED UNDER WARRANTY.**
- Dropping any components in the system or subjecting it to excessive shock and vibrations as this may cause it to malfunction and is not covered by warranty.
- **The Control Box of the Parking Sensor System IS NOT WATERPROOF.** Avoid exposing it to rain or other forms of excessive moisture.
- **Water damage is not covered under the warranty.**
- **CAN BUS Vehicles:** There is NO NEED TO CUT AN ORIGINAL VEHICLE WIRE YOU MUST SPLICE WIRE ONLY AND OBTAIN POSITIVE POWER (+12V).
- **MUST CHECK BEHIND BUMPER FOR ANY METAL BRACKETS OR INTERNAL BRACES BEFORE DRILLING**
- The Parking Sensor Systems are used for the rear placement only, these are not recommended for front mounted bumpers.
- **The use of Rydeen Parking Sensor system should never replace normal operational and safety precautions needed for reversing a vehicle.** Caution should always be taken in ANY vehicle operation.

1. Kit Contents

 <p>A</p> <p>TYPE 1 BL-422P BL-412PM</p> <p>TYPE 2 BB-411PM</p> <p>X1</p>	 <p>B</p> <p>TYPE 1 BL-422P</p> <p>TYPE 2 BB-411PM BL-412PM</p> <p>X4</p>	 <p>C</p> <p>BL-422PM ONLY</p> <p>X4</p>	 <p>D</p> <p>TYPE 1 BL-422P BL-412PM</p> <p>TYPE 2 BB-411PM</p> <p>X1</p> <p>X4</p>	 <p>E</p> <p>TYPE 2 Optional Distance Display</p> <p>Not Included for BB-411PM Optional SPK-001 Available</p> <p>X1</p>
 <p>F</p> <p>EXTENSION CABLES</p> <p>X4</p>	 <p>G</p> <p>Power Wire</p> <p>X1</p>	 <p>H</p> <p>X1</p>	 <p>I</p> <p>X4</p> <p>X1</p>	 <p>J</p> <p>Paint Mask</p> <p>X1</p>

2. Painting the Sensors


1) Preparation

For BL-422P

Make sure the silicon rubber rings are not installed around the sensor head


For BL-412PM and BL-411PM

Remove the plastic rings (**silicon rubber is not removable, do not attempt to remove**)

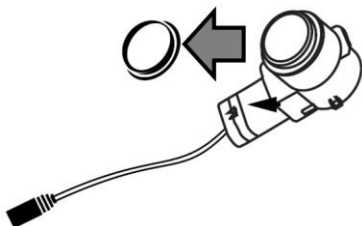

- 2) Sand the surface of sensors with a fine sandpaper (1000 or 1200 grit) for better paint adhesion. Clean the sensor well to be free from sanding dust.

3) Place the sensors inside the paint mask box (provided).

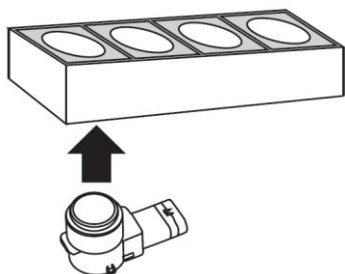


4) Spray and paint

Apply a thin coat of paint. Let it dry then paint again for better paint coating coverage.


(For BL-412PM and BL-411PM)

Paint the plastic rings together with the sensor heads.

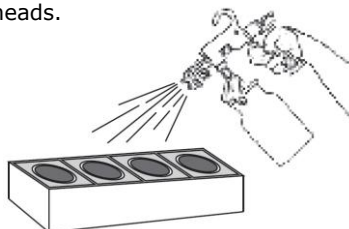


5) (BL-422P ONLY)

Depending on the vehicle body color, place white silicon rubber rings for a lighter color vehicle, place black rings for a dark color vehicle.

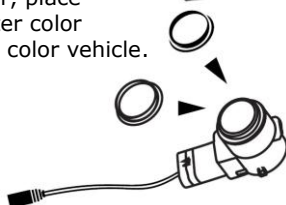


3. System Overview

For a Passenger Car

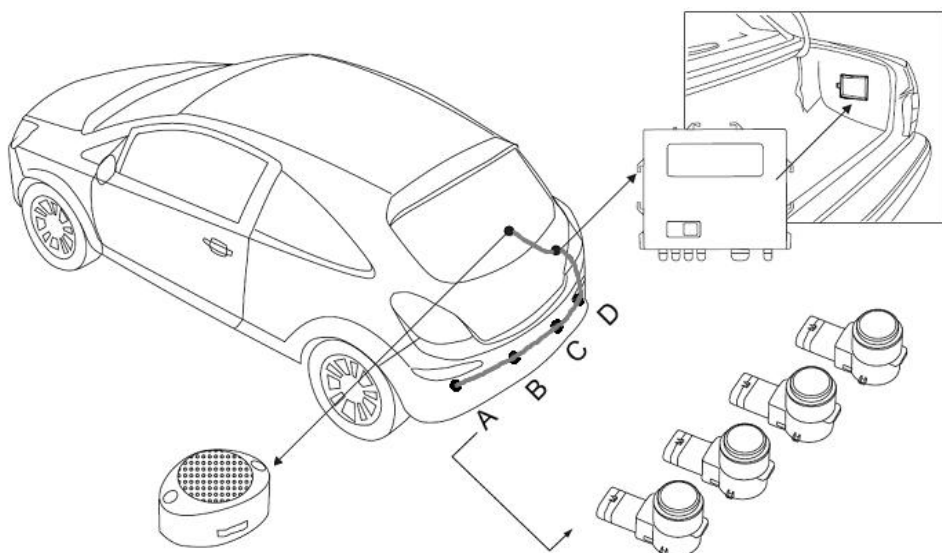



The Control Box for BB-411PM includes a buzzer, so the additional buzzer (SPK-001) is optional. For BL-422P & BL-412PM, place the buzzer at rear seats. Avoid from water damage.

For a Truck

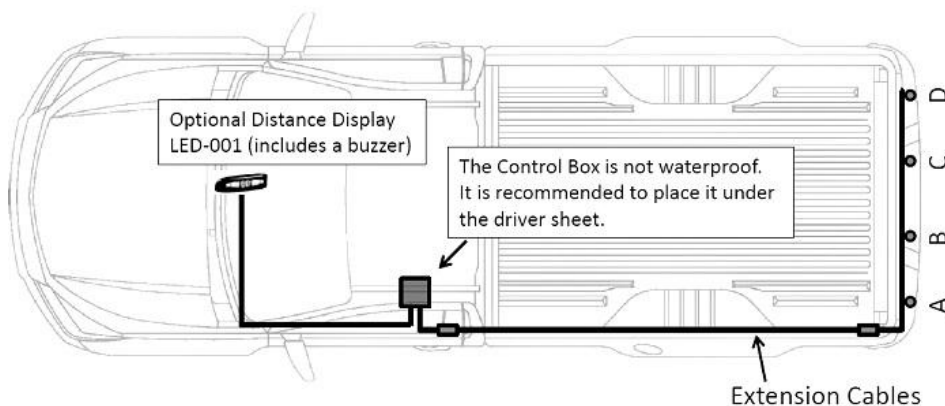

4. Installation


- 1) The proper placement of the sensors is important both for appearance and for the proper operation of the unit. Sensors should be mounted at 90° angles to the ground. It is important to avoid obstructions caused by bumper shape.
- 2) Measure the height on a bumper for proper installation locations.

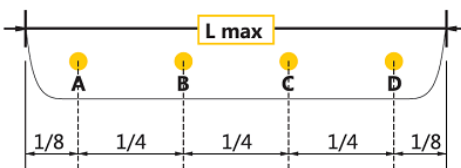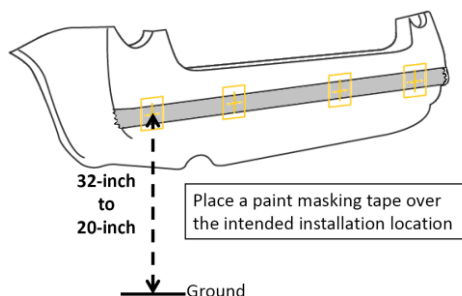


- 3) Generally, it is the best to mount the sensors as high as possible in the bumper. Use paint masking tape and mark the location as above diagram for the proper spacing of the sensors.

Important!
MUST CHECK BEHIND THE BUMPER FOR ANY METAL BRACKETS OR INTERNAL BRACES BEFORE DRILLING

- 4) Also be sure that the bumper surface and the sensors will fit at 90° to the ground. Make sure the hole surface is clean and start cutting the bumper surface in counter clockwise direction (A) first to prevent from paint to chip, then drill the hole in clockwise direction (B).

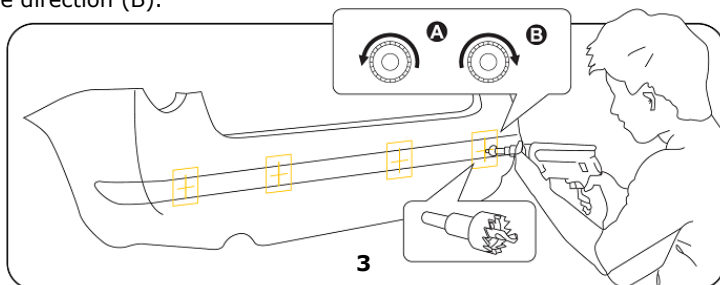


BL-422P sensors MUST be installed inside the bumper and only the sensor head to exposed to outside. Bumper removal is required for this installation.

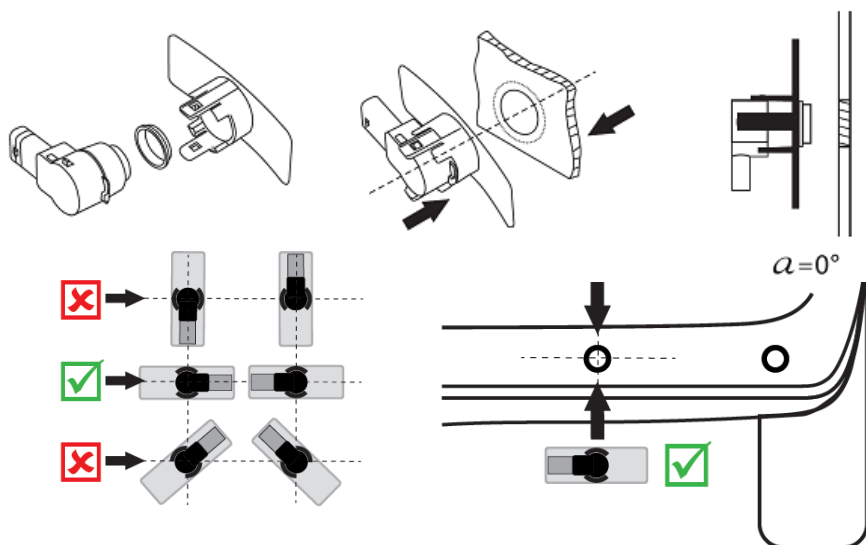

BL-412PM and BB-411PM sensors MUST be installed from outside of the bumper. Please check the direction dot (WHITE) and make sure of the correct orientation.

Sensor installation

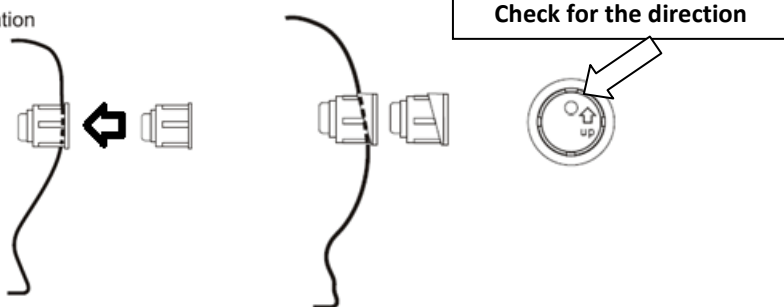

Vertical installation position to the ground

5) It is important not to drill the hole larger than the measurement indicated.

MUST use the hole saw provided.

6) Route the sensor wires through the bumper to a suitable location in the vehicle trunk or rear hatch. Connect the main control unit RED wire to a positive charge wire of the vehicle back-up light. Connect the main control unit BLACK wire to a stable ground.

7) After routing and attaching the cables, use an offal (small block of wood, etc) to press the sensors into place. **NEVER push the sensor heads (center portion) to push into the bumper.**


Important!

- Do not use the negative charge wire of the vehicle back-up light for ground. Some vehicles have a “check bulb” feature that makes that wire not a true ground.
- The system may not detect a small and round pole (such as a fire hydrant or light pole, etc).
- When the vehicle approaches a rising slope, the slope may not be detected, as most of the signal will be reflected up and not back at the vehicle.

5. Detecting Range


Normal Detecting Range

The sensors' detection range is as following. They can detect up to 8-feet.

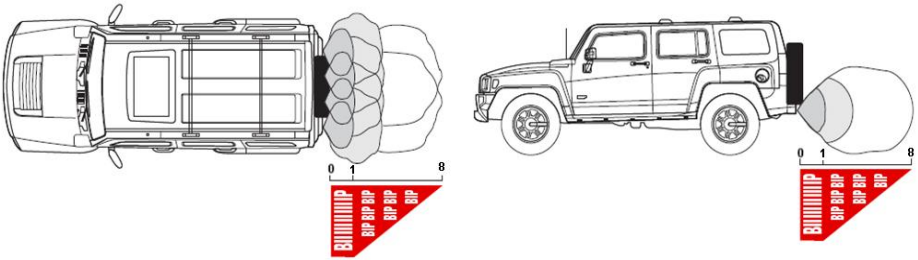


Sensor Detecting Test

The sensitivity adjustment potentiometer has been factory preset for proper operation. If adjustment is required, use a screwdriver and turn the potentiometer by a small increment clockwise to increase the sensitivity, or counterclockwise to decrease the sensitivity.

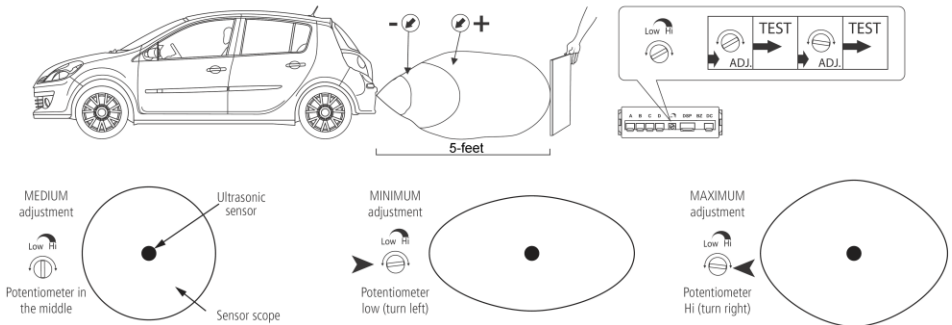


Programming the Control Box with a Spare Tire or Bicycle in Back of Vehicle

In case the vehicle carrying a spare tire or a bicycle, the Control Box can be pre-adjusted to indicate the alternative STOP position. Select from 0 (default), 1-foot, 2-feet or 3-feet. Make sure to TEST before the usage (using at least 3X3-feet size cardboard) in order to avoid accidents.

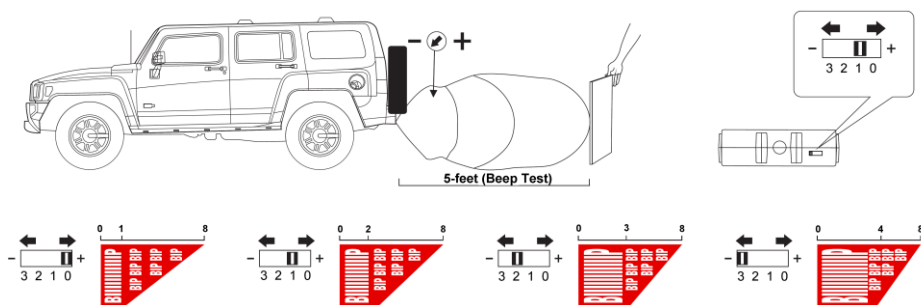

6. Camera Connection (BL-422P & BL-412PM)

- 1) Follow the instruction of BackUp Camera for a proper installation.
- 2) Connect Camera Video Output RCA to Camera Line RCA on the harness.
- 3) Connect Video Line RCA on the harness to the RCA line of Video Monitor (In-dash, Mirror Monitor, or Stand-Alone Monitor).
- 4) After the installation is complete, turn the ignition to ACC then shift vehicle into reverse, the camera image will appear on the screen.
- 5) Shift vehicle out of reverse and the camera image will disappear and go back to its previous stage
- 6) Check for if the image is in a perfect mode. Adjust according to camera or monitor's installation manual.

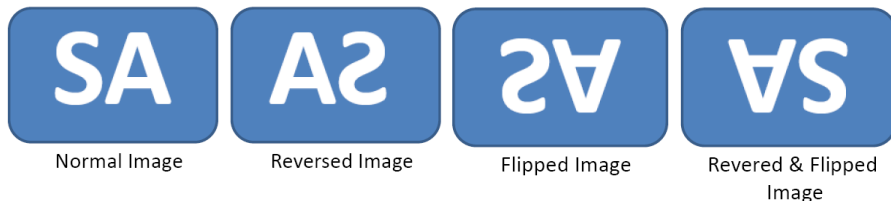

7. Technical Support Contact Info

If you have other questions about the **RYDEEN Parking Sensor Products**, please contact your retailer or Technical Support:

- Telephone: **1-877-777-8811 (within USA only)**
- Email: **tech1@rydeenmobile.com**
- Web Address: **www.rydeenmobile.com**

One Year Limited Warranty

Rydeen North America Inc. (a manufacturer of "RYDEEN" products) warrants this product (Parking Sensor Systems) only to the original purchaser as described by the following:

Warranty Period

Rydeen warrants this product for a period of one (1) year from the original purchase date.

Warranty Coverage

This warranty covers all defects in material and workmanship except as specified below.

1. Installation by anyone other than an authorized RYDEEN retailer voids the warranty.
2. Any products distributed outside of the USA by Rydeen North America Inc. (RYDEEN) or which is not purchased in the USA or Canada unless the product is purchased through the USA Military Exchange Service.
3. Any product(s) which are purchased from an unauthorized retailer (in store or online).
4. Any products in which the serial number label or the model number label are removed, torn, modified or replicated.
5. Any damage defects or malfunctions resulting from any of following:
 - a) When defect occurs during shipment of product (freight carrier's responsibility).
 - b) Installation or removal of product.
 - c) Accidents, act of nature, misuse, abuse, neglect, unauthorized product modification or failure to follow product owner's manual instructions.
 - d) Any repair or attempt to repair without RYDEEN authorization.
 - e) Any other cause which is not related to product defect.
 - f) Any cosmetic damages due to normal wear and tear.
 - g) Any consumable items (such as fuse or batteries).

If any problems develop with your RYDEEN products during or after the Limited Warranty Period, or if you have any questions regarding the operation or installation of the product, you should contact your RYDEEN retailer. If the problem or your question is not handled to your satisfaction, please contact Rydeen Customer Service Department at 1-877-777-8811 (within the USA only) Monday - Friday between 9:00 AM to 4:00 PM Pacific Standard Time or visit www.rydeenmobile.com.



www.rydeenmobile.com

Rydeen North America Inc.
dba Rydeen Mobile Electronics
2701 Plaza Del Amo, Suite 705, Torrance, California 90503 USA

Phone: 1-877-777-8811 Fax: 1-310-943-3778

Copyright © 2012 Rydeen North America Inc. All Rights Reserved.

These materials are protected by copyright law and international treaties. Any unauthorized use, reproduction or distribution of these materials, or any portion herein, will result in severe civil and criminal penalties and fines. Violators will be prosecuted to the fullest extent of the law.