

The Playlist Mode of USA SPEC iPod interfaces has been replaced by Hybrid Mod. Hybrid Mode combines the advantages of both Playlist Mode and Direct Mode; therefore USA SPEC iPod interface delivers a new level of convenience to use your iPod in car.


SAFETY NOTE: ALWAYS give full attention to driving. Do not operate iPod in such a way that will distract you while you are driving.

- In Hybrid Mode, the songs on iPod are accessed exactly in the same way as in the Playlist Mode been explained in the owner's manual. But, iPod screen is NOT locked to "ok to disconnect" and iPod control keys are also fully functional. Therefore, while playing your iPod at any DISC location of radio, you can manually change song, change artist, change album, fast forward, fast reverse, etc. through the keys on iPod.
- If the playback of a Playlist is manually "interrupted" through iPod's key pad and a song or music in a "new category" is played, the interface module memorizes the last played track number of the "new category". "New category" means folders, or Playlist, or artist, etc. which is different from the Playlist being played. When you return to the same DISC on radio later, the interface module will use the "memorized" track number (note: just the track number, not the last played song in the new category) to playback the Playlist related to this DISC.
- Hybrid Mode is selected by setting the DIP switch #2 on interface module to ON position.
- When iPod is connected to interface module, the iPod will take approximately 30 seconds to complete its external control mode configuration. During this period of time, the iPod screen's display will continue change until the configuration is completed.
- The number of Playlist being supported and all other functions, including the naming of Playlists for Hybrid Mode are the same as in Playlist Mode.
- In Hybrid Mode, you can fast forward and fast reverse the music with the fast forward and fast reverse buttons on your radio.
- For those USA SPEC iPod interface products which support TEXT display on radio, the TEXT display feature is continue supported.
- G3 iPod is not compatible with Hybrid Mode. G3 iPods will be in Playlist mode when DIP switch #2 is at ON position.
- The operation of Direct Mode remains unchanged.

13/03 PEG

Model PA11-CHR

iPod to Chrysler car stereo Interface

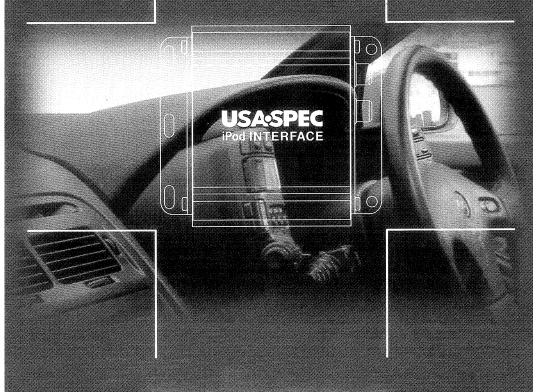

OWNER'S MANUAL

TECH. SUPPORT (626)890-6410 9 AM ~ 4 PM PST Monday ~ Friday Thank you for purchasing **USASPEC** product. This manual describes the functions and operation of PA11-CHR iPod interface for Chrysler. Please read this manual before installing the product in your vehicle.

Section 1. ABOUT YOUR INTERFACE PA11-CHR

This interface connects an iPod directly to your Chrysler audio system. Its on-board software translates commands from your Chrysler CD changer controls into commands that the iPod understands. This interface enables the iPod to take the place of a Chrysler CD changer and provides the following benefits:

- Directs the iPod's audio output to Chrysler vehicle audio system for optimal sound quality playback.
- Controls the iPod via vehicle's radio and steering wheel controls.
- Charges the iPod's internal battery, and charging stops automatically at one hour after iPod is paused. iPod will go to SLEEP mode after charging.

Compatibility

This PA11-CHR interface is compatible with iPod and iPod mini models featuring a dock connector. The functionality and features of the iPod interface described in this owner's manual are confirmed with firmware version 1.3 for iPod mini, firmware version 2.3 and 3.0.2 for iPod, and firmware version 1.1 for iPod photo.

Future firmware updates for your iPod or iPod mini or iPod photo may affect the features and functions described in this owner's manual.

Display of artist and song title information, track search by artist, song title, album or genre are NOT supported. Only the Playlist number and track number are displayed on radio.

This interface is designed as an alternative replacement to the Chrysler 6 Disc CD changer unit in your Chrysler vehicle. Therefore it is not possible to have the Chrysler 6 Disc CD Changer and PA11-CHR iPod interface simultaneously connected to your Chrysler radio.

Package Contents

PA11-CHR contains one each of PA11-CHR interface adopter, CAS-CXi and CB-PA14 cables.

Applications

PA11-CHR is applicable to the following Chrysler vehicles:

Chrysler	300M LHS Concorde	98-04 98-04 98-04	Pacifica PT Cru Sebring		04-05 01-05 01-05	Town & Country Voyager	01-05 01-05
Dodge	Caravan Dakota Durango	01-05 01-05 01-03	Intrepid Neon	98-04 00-05		Status 01-05 Ram 02-05	
Jeep	Grand Cho Liberty	erokee	99-04 02-05			Wrangler 03-05	

Note: PA11-CHR is not applicable to Factory Navigation and DVD systems.

Radio must have a "MODE" or "CD-C" button.

Section 2. PLAYLIST MODE, DIRECT MODE and AUX OPTION

PA11-CHR provides two ways to control your iPod through car radio, namely Playlist Mode and Direct Mode.

- 2-1 Direct Mode: Search and select music on iPod directly just as you would in portable use. The sound of music will play back through your car stereo. Use the track up down, fast forward and reverse buttons on your radio to control music playback. All control functions on iPod are available to use too. Please see section 4 of this manual for additional information
- **2-2 Playlist Mode**: Operate and control the iPod like it is a CD changer. This mode allows you to access up to five Playlists on the iPod. This is also referenced as External Control Mode of the iPod. The detail of Playlist creation and playback controls are in section 5 of this manual.

DIP switch #2 is for mode selection use. "ON" position is for **Playlist Mode** and "OFF" position is for **Direct Mode**. It is preset to **playlist Mode** at factory.

Note: Disconnect iPod from PA11-CHR before switching DIP switch #2 for mode alteration.

2-3 Additional AUX INPUT Option Selection

PA11-CHR interface adaptor is capable of connecting two audio sources to your Chrysler radio including the iPod. The additional audio source connects to the RCA input jack labeled as AUX INPTUT. If you choose to use AUX INPUT, the DIP switch #1 at the side of adaptor box must be set to "OFF" position (factory presets it at "ON" position).

The audio source at AUX INPUT can be accessed at CD 6 Track 1 after selecting CD changer source on the radio. CD1 to CD 4 are for accessing Playlists and CD 5 is for accessing all songs on iPod.

Operation of AUX

If the "AUX INPUT" option is selected, radio will display "CD 6 Track 1" when DISC button is pressed. "CD 6 Track 1" gives access to the audio source connected to AUX INPUT port.

Adjust VOLUME, BASS, TREBLE and etc. as you would normally do for the other program sources on the radio.

Section 3. INSTALLATION


- Step 1- Remove radio from the dash.
- Step 2- Disconnect existing CD changer from the radio if there is one.
- Step 3- Plug the round din plug of the CAS-CXi to PA11-CHR interface adaptor where it is labeled "RADIO".
- Sept 4 -Plug the other end of CAS-CXi cable to the receptor at the back of radio. (For radio with "MODE" function button, use the gray square connector on CAS-CXi.)

(For radio with "CDC" function button, use the round metal end of CAS-CXi.)

- Step 5-a- Connect the audio output of your auxiliary devices to AUX input jack on PA11-CHR adapter box if the additional AUX option is selected by setting the DIP swich#1 to "OFF" position.
- Step 5-b- Set the DIP switch #2 to "OFF" position only if the **Direct Mode** is preferred.
- Step 6- Plug CB-PA14 cable to PA11-CHR adaptor box where it is labeled "iPod".
- Step 7- Reinstall radio to the dash.

WARNING!!

Use only the iPod connection cable which comes with PA11-CHR interface adaptor. iPod Connection cables from other sources may look similar, but they may damage your iPod.

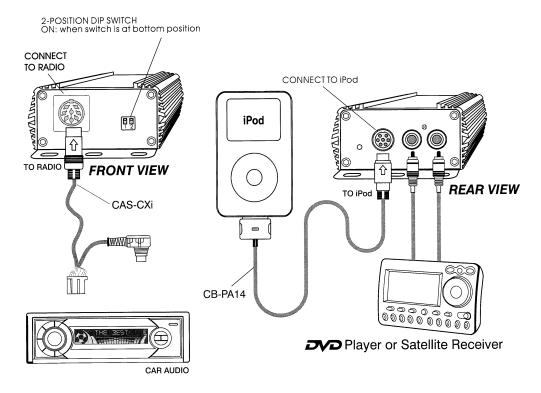

Section 4. CONNECTING & PLAYING of iPod in DIRECT MODE

When the iPod is connected to the adaptor, iPod's screen will go blank for few seconds before the normal screen returns. Set source to CD changer on your radio, the audio of iPod music will be played back at DISC 5 and Track 1. Adjust VOLUME, BASS, TREBLE and etc. as you would normally do for the other program sources on the radio.

Section 5. CONNECTING & PLAYING of iPod in PLAYLIST MODE

5-1 Connecting iPod to the interface

Turn your Chrysler radio ON before connecting your iPod. After connection, the iPod will take a few moments to change to external control mode. On the screen of iPod will then show

iPod CHR OK to disconnect

and you are now able to select iPod mode.

5-2 Select iPod mode on Chrysler radio

Press the **CDC** or **MODE** button on radio repeatedly until "CD 1-x" appears on the radio display (x is the track number of "Now Playing" song on **iPod**). This display confirms that **iPod** mode has been completely synchronized and activated. Synchronization timing varies according to the number of Playlists on your **iPod**.

If iPod was playing previously before radio or ACC power was OFF, and the iPod was not disconnected, playback resumes from where it was stopped.

5-3 Disconnecting iPod from the interface

If your iPod is disconnected during playback in iPod mode, the radio will automatically switch to AM/FM mode.

After disconnecting, iPod screen changes from the external control mode screen back to the normal menu. Press and hold the Play/Pause button on iPod may get the normal menu back faster.

5-4 Playback of songs on iPod

All audio tracks on your iPod will be played (All play) at DISC 6. Track order is determined by the default order on your iPod . Selecting DISC1 to DISC 5 on radio will allow playback of 5 Playlists on iPod . Every time when iPod is connected to the interface adaptor, the playback starts from "Now Playing" song at DISC 6 by default.

If iPod was playing any of its Playlist right before the connection, the same Playlist will continue to play and repeated at disc 6 but iPod will switch to "All" as soon as the fast forward button ($\triangleright \triangleright$) is pressed.

5-5 Selecting a Playlist

Press DISC UP (Λ) or DISC DOWN (V) button to select a Playlist. The selected Playlist will begin playing and the Playlist number and track number will be displayed. In rare cases, this may take up to few seconds for the completion of synchronization.

After playing the last song in the current Playlist, playback will start again from the first track of this Playlist.

Playlist naming

 When iPod is connected to your radio via PA11-CHR interface adaptor, the adaptor scans all available Playlists on iPod and looks for designated "CHR" Playlists which are created for direct access with DISC buttons on Chrysler radio. The designated "CHR" Playlists are related to DISC number in the following manner:

```
DISC 1: "CHR1..."
DISC 2: "CHR2..."
DISC 3: "CHR3..."
DISC 4: "CHR4..."
DISC 5: "CHR5..."
DISC 6: ALL SONGS on iPod
```

The naming of designated "CHR" Playlists in iTune for PA11-CHR interface must be exactly as shown. "CHR" must be in capital letters and there can be no spaces between "CHR" text and number.

However, you may add any text after the correct naming of a Playlist. (i.e. "CHR1-Jazz", "CHR3_Favorite3" are acceptable Playlist names for PA11-CHR iPod interface.)

- If no designated "CHR" Playlists are created, PA11-CHR adaptor automatically relates to the first five available Playlists on iPod to DISC number 1 to 5 regardless Playlist's naming.
- If less than five designated "CHR" Playlists are created, PA11-CHR adaptor automatically fills up the rest of DISC numbers beginning with the first available Playlist on iPod. Example: if only three designated "CHR1", "CHR3" and "CHR5" Playlists are created, the disc number on radio will be:

DISC 1: "CHR1..."

DISC 2: (1st available PlayIsit on iPod)

DISC 3: "CHR3..."

DISC 4: (2nd available Playlist on iPod)

DISC 5: "CHR5..."

The iPod interface does not recognize a Playlists that contains no audio tracks regardless of Playlist naming. The iPod interface also does not recognize the "On-The-Go" Playlist on your iPod.

5-6 Playback function controls

You can control playback with several functions. These functions are generally cancelled when you press select radio buttons; disconnect the **iPod** , or POWER OFF the radio or ACC.

SCAN

Press the scan button, each track in the current Playlist play for 10 seconds. If SCAN is pressed at DISC 6, it will play all songs in iPod for 10 seconds each.

Random (Shuffle)

Press the random button (RND), songs within a Playlist will playback in random order. The display of track number will change to start from 1 as it does on the **iPod**.

Repeat

Repeat of a song being played is not supported.

Track Up/Down

Press the track up button to advance to the next track in the Playlist. Press the track down button to go to the beginning of the track that's being played. Press the track down button twice to go to the previous track.

If the track up or track down buttons is pressed quickly in repetition, the track numbers displayed may change unevenly. You may also hear short bits of audio during repeated presses of track up and track down buttons.

If your Chrysler radio currently displays a maximum of two digits for track number. Track number 100 will be displayed as 01, Track 101 displayed as 02, track 102 as 03

Fast Track Search (x10)

Press the fast forward or fast reverse buttons (◀◀ ▶▶), it will advance or retreat through the tracks in the Playlist in increment of 10 (i.e. 04, 14, 24...). When the end of the Playlist is reached, the search will stop at track 1, and then continue by increments of 10 (i.e. 19, 29, 1, 11...).

Press and hold the fast forward or fast reverse buttons for more then 4 seconds, the search will jump to the last track or the first track of the Playlist.

If you are in scan mode, the mode will be cancelled.

Fast Forward/Fast Reverse Play

This function applies **only** in random mode. Since engaging or disengaging the random mode does not stop playback of the current song, you can change into or out of random mode to do the fast track search (x10) function, or the fast forward/fast backward play function.

Press and hold the forward or backward button will cause only the current tack to skip through at speed.

During fast forward, when the end of the current track is reached, the iPod will start playing the next random track at normal speed. During fast backward, when the start of the current track is reached, the track will start playing again at normal speed. To continue fast forward or fast reverse play, release the button and press it again.

Changing source to AM/FM, CD, Cassette

When a source other then the iPod is selected on radio, the iPod will pause.

Section 6. CAUTION

- In general, iPod has not been designed to withstand temperature extremes in automobiles.
 Please consult your iPod Owner's Manual regarding acceptable operation and storage temperatures.
- Do not disassemble or alter the cable and interface box.
- Make the connections correctly.
- Do not cut away the wire sheath or use the power for other equipments.
- Do not install in locations which might hinder vehicle operation or create hazards for vehicle occupants.
- Having the wiring and installation done by professionals.
- Arrange wiring so it is not crimped or pinched.
- Do not use this product for purposes other than stated for the vehicle.

Note: iPod, iPod mini, iPod photo and iTune are registered trade marks of Apple Computer, Inc.

XM is a trade mark of XM Satellite Radio Inc.

Chrysler is a registered trade mark of Daimler Chrysler Corporation.

Design and specifications are subject to change without notice.



Model PA11-CHR

iPod to Chrysler car stereo Interface

PLAY, CONTROL & CHARGE

Your iPod through Chrysler Car Stereo System!

KEY FEATURES

This interface connects an iPod or iPod mini directly to your Chrysler audio system with following benefits:

- · Connect directly iPod's audio output to Chrylser vehicle audio system for optimal sound quality playback.
- In Playlist Mode: Select songs and Playlists on iPod with CD changer button on radio.
- · In Direct Mode: Search and select songs directly on iPod .
- Maintain current Playlist when switching from portable to in-car use.
- · Charge the iPod battery while playing, charging automatically ends at one hour after iPod is paused to prevent car battery drain.
- Plus-DVD player, Satellite radio or other audio device can be used in conjunction with the iPod through Aux Audio Input jack
- Plug-n-Play: This complete package includes installation cables, mounting screws and user's manual.



Display of artist and song title information, track search by artist, song title, album or genre are NOT supported. Only the Playlist and track numbers are displayed.

APPLICATIONS

PA11-CHR is applicable to the following Chrysler vehicles: 04-05 01-05 98-04 Town & Country Chrysler 300M Pacifica 01-05 LHS 98-04 PT Cruiser 01-05 Voyager 01-05 98-04 Sebring / Cirrus Concorde 98-04 Status 01-05 Intrepid Dodge Caravan 01-05 02-05 Ram 01-05 Neon 00-05 Dakota 01-03 Durango Wrangler 03-05 Grand Cherokee 99-04 Jeep Liberty

Note: PA11-CHR is not applicable to Factory Navigation and DVD systems. Radio must have a "MODE" or "CD-C" button.

XM is a trade mark of XM Satellite Radio Inc. Chrysler is a registered trade mark of Daimler Chrysler Corporation.

LTI Enterprises, Inc. 167 Mason Way, Unit A2. City of Industry, CA91746 www.usaspec.com Tel(626)336-3836

Made in Korea

IMPORTANT WARRANTY INFORMATION ENCLOSED PLEASE REGISTER FOR EXTENDED COVERAGE

WARRANTY CENTER

LTI Enterprises Inc.

167 Mason Way, Unit A2 City of Industry, CA 91746 Phone (626)336-3836 Fax (626)336-0115

LIMITED WARRANTY REGISTRATION CARD

Model No:	Serial No	:	_
Name			
Address			
City	State	Zip	
Date of Purchase		·	
Dealer Name/Address			
Vehicle Make :	YrN	Model	

LIMITED WARRANTY

Thank you for choosing a **USASPEC** product. LTI Enterprises Inc., is committed to providing high quality defect free products. All **USASPEC** products are tested before leaving the factory and are warranted against defects in materials and workmanship for a period of three year to the original owner. The three-year warranty period begins at the date of manufacture or the date of original installation.

Please see installation registration below.

PRODUCTS COVERED:

Products and related accessories supplied by LTI Enterprises Inc. with the brand name of **USASPEC** are covered by this warranty. Only products purchased in the U.S.A. is covered.

WARRANTY DOES NOT COVER:

- 1. Damage due to improper installation, operation, accident, negligence, abuse, or not following instructions, warnings, and acceptable industry procedures.
- Damage caused during the shipment or transportation of the product. All claims of this nature must be presented to the carrier.
- 3. Damage caused by acts of God, War, or civil disturbance, including without limitation, flood, fire, storms, earthquake or other acts of nature.
- 4. Any expenses or cost to remove or reinstall products.
- Any product without the original serial number and factory seal, or has been serviced or modified without the authorization of LTI Enterprises Inc.
- 6. Any product not distributed by an authorized LTI Enterprises Inc. dealer.

INSTALLATION REGISTRATION:

To provide warranty coverage from the date of installation the limited warranty registration card with this information must be completed and returned to LTI Enterprises Inc. within thirty(30) days of the installation.

TO OBTAIN WARRANTY SERVICE:

Contact the Customer Service center printed on the back of this warranty for assistance. A detailed description of the problem(s) is required for service. Proof of purchase is also required when sending a product for warrant service. If the problem cannot be resolved and the product must be returned for service you will receive an authorization from the service center. The product must be delivered pre-paid to the service center. LTI Enterprises Inc. will, at our option, repair the product or replace it with new or reconditioned product, and if it was shipped to the service center, the return shipping will be pre-paid free of charge provided the repairs are covered by the warranty. The product must be packed securely for shipment to the service center in order to preserve the warranty and prevent damage.

NO IMPLIED WARRANTY, INCLUDING MERCHANTABILITY AND FITNESS FOR USE, APPLIES TO THIS PRODUCT AFTER THE THREE YEAR PERIOD AS DEFINED ABOVE, AND NO OTHER EXPRESSED WARRANTY OR GUARANTEE, EXCEPT AS MENTIONED ABOVE, GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BIND THE WARRANTOR. NEITHER THE WARRANTOR NOR ANY OTHER PERSON, FIRM OR CORPORATION, IS RESPONSIBLE FOR LOSSES OR INCONVENIENCES, OR FOR ANY CONSEQUENTIAL DAMAGES CAUSED BY THE PRODUCT. SOME STATES/PROVINCES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, AND SOME DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTIAL OR CONSEQUENTIAL DAMAGES.

This warranty gives you specific legal rights, and you may also have other rights, which vary, from state to state and province to province. Some of the limitations or exclusions may not apply to you.