X5VI-6515-NAV

Fiat 500 2012-up XSVI-6515-NAV

2012-UP Fiat 500 accessory and NAV output CAN Interface

- Provides accessory (12 volt 10 amp)
- Retains R.A.P. (Retained Accessory Power)
- Used in both amplified and non-amplified systems
- Provides NAV outputs (Parking Brake, Reverse, Mute, and V.S.S.)
- · ASWC harness included (ASWC not included)
- · High level speaker input
- Retains OE BT/USB and 3.5mm audio
- USB updatable

X5VI-6515-NAV

Fiat 500 2012-up XSVI-6515-NAV

2012-UP Fiat 500 accessory and NAV output CAN Interface

- Provides accessory (12 volt 10 amp)
- Retains R.A.P. (Retained Accessory Power)
- Used in both amplified and non-amplified systems
- Provides NAV outputs (Parking Brake, Reverse, Mute, and V.S.S.)
- · ASWC harness included (ASWC not included)
- · High level speaker input
- Retains OE BT/USB and 3.5mm audio
- USB updatable

	APPLICATIONS		APPLICATIONS
Fiat		Fiat	
500	2012-up	500	2012-up

1-8	00-221-0932	🌉 metraonline.com
REV. 5/10/12	© COPYRIGHT 2004-2011	METRA ELECTRONICS CORPORATION

I-800-221-0932 metraonline.com REV. 5/10/12 © COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

XSVI-6515-NAV

Fiat 500 2012-up XSVI-6515-NAV

2012-UP Fiat 500 accessory and NAV output CAN Interface

- Provides accessory (12 volt 10 amp)
- Retains R.A.P. (Retained Accessory Power)
- · Used in both amplified and non-amplified systems
- Provides NAV outputs (Parking Brake, Reverse, Mute, and V.S.S.)
- ASWC harness included (ASWC not included)
- · High level speaker input
- Retains OE BT/USB and 3.5mm audio
- USB updatable

APPLICATIONS

Fiat 500

2012-up

X5VI-6515-NAV

Fiat 500 2012-up XSVI-6515-NAV

2012-UP Fiat 500 accessory and NAV output CAN Interface

- Provides accessory (12 volt 10 amp)
- Retains R.A.P. (Retained Accessory Power)
- Used in both amplified and non-amplified systems
- Provides NAV outputs (Parking Brake, Reverse, Mute, and V.S.S.)
- ASWC harness included (ASWC not included)
- · High level speaker input
- Retains OE BT/USB and 3.5mm audio
- USB updatable

APPLICATIONS

Fiat 2012-up

XSVI-6515-NAV

Wiring the XSVI-6515-NAV

- Connect the Yellow wire to the radio's 12-volt battery or memory wire.
- Connect the **Black** wire to the radio's ground wire.
- Connect the **Red** wire to the ignition wire of the aftermarket radio
- Connect the **Orange/White** wire to the illumination wire of the aftermarket radio. If the aftermarket radio has no illumination wire, tape off the orange wire.
- Connect the Blue wire to the antenna turn on wire of the aftermarket radio.
- Connect the Blue/White wire to the radio's amp turn on wire.
- Connect the White wire to the left front positive speaker output of the aftermarket radio.
- Connect the White/Black wire to the left front negative speaker output of the aftermarket radio
- Connect the Gray wire to the right front positive speaker output of the aftermarket radio
- Connect the Gray/Black wire to the right front negative speaker output of the aftermarket radio
- Connect the Green wire to the radio's left rear positive speaker output.
- Connect the Green/Black wire to the radio's left rear negative speaker output.
- Connect the **Purple** wire to the radio's right rear positive speaker output.
- Connect the Purple/Black wire to the radio's right rear negative speaker output.
 Connect the Light Green wire to the parking brake wire of the aftermarket
- navigation radio.
- Connect the **Blue/Pink** wire to the VSS or speed sense wire of the aftermarket navigation radio.
- Connect the Green/Purple wire to the reverse wire of the aftermarket navigation radio.
- Plug the AUX/3.5mm or BT/USB RCA's to the aftermarket radio's AUX input.

Initialize the XSVI interface

With all connections made and harnesses connected to the vehicle, turn the ignition key to the ON position for 30 seconds, then turn the key OFF, then ON again to test the radio.

ASWC (if installing)

After the XSVI is initialized, plug in the ASWC into the 12-pin harness of the XSVI-6515-NAV and refer to the ASWC instructions.

1-8	00-221-0932	🌉 metraonline.com
REV. 5/10/12	© COPYRIGHT 2004-2011	METRA ELECTRONICS CORPORATION

X5VI-6515-NAV

Wiring the XSVI-6515-NAV

- Connect the Yellow wire to the radio's 12-volt battery or memory wire.
- Connect the Black wire to the radio's ground wire.
- Connect the **Red** wire to the ignition wire of the aftermarket radio
- Connect the **Orange/White** wire to the illumination wire of the aftermarket radio. If the aftermarket radio has no illumination wire, tape off the orange wire.
- Connect the Blue wire to the antenna turn on wire of the aftermarket radio.
- Connect the Blue/White wire to the radio's amp turn on wire.
- Connect the White wire to the left front positive speaker output of the aftermarket radio.
- Connect the White/Black wire to the left front negative speaker output of the aftermarket radio
- Connect the Gray wire to the right front positive speaker output of the aftermarket radio
- Connect the **Gray/Black** wire to the right front negative speaker output of the aftermarket radio
- Connect the **Green** wire to the radio's left rear positive speaker output.
- Connect the Green/Black wire to the radio's left rear negative speaker output.
- Connect the **Purple** wire to the radio's right rear positive speaker output.
- Connect the **Purple/Black** wire to the radio's right rear negative speaker output.
- Connect the Light Green wire to the parking brake wire of the aftermarket navigation radio.
- Connect the Blue/Pink wire to the VSS or speed sense wire of the aftermarket navigation radio.
- Connect the Green/Purple wire to the reverse wire of the aftermarket navigation radio.
- Plug the AUX/3.5mm or BT/USB RCA's to the aftermarket radio's AUX input.

Initialize the XSVI interface

With all connections made and harnesses connected to the vehicle, turn the ignition key to the ON position for 30 seconds, then turn the key OFF, then ON again to test the radio.

ASWC (if installing)

After the XSVI is initialized, plug in the ASWC into the 12-pin harness of the XSVI-6515-NAV and refer to the ASWC instructions.

🥛 1-80	00-221-0932	🌉 metraonline.com
REV. 5/10/12	© COPYRIGHT 2004-2011	METRA ELECTRONICS CORPORATION

Wiring the XSVI-6515-NAV

- Connect the Yellow wire to the radio's 12-volt battery or memory wire.
- Connect the **Black** wire to the radio's ground wire.
- Connect the **Red** wire to the ignition wire of the aftermarket radio
- Connect the **Orange/White** wire to the illumination wire of the aftermarket radio. If the aftermarket radio has no illumination wire, tape off the orange wire.
- \bullet Connect the $\ensuremath{\textbf{Blue}}$ wire to the antenna turn on wire of the aftermarket radio.
- Connect the **Blue/White** wire to the radio's amp turn on wire.
- \bullet Connect the $\ensuremath{\textbf{White}}$ wire to the left front positive speaker output of the aftermarket radio.
- Connect the White/Black wire to the left front negative speaker output of
 the aftermarket radio
- Connect the Gray wire to the right front positive speaker output of the aftermarket radio
- Connect the Gray/Black wire to the right front negative speaker output of the aftermarket radio
- Connect the **Green** wire to the radio's left rear positive speaker output.
- Connect the Green/Black wire to the radio's left rear negative speaker output.
- Connect the **Purple** wire to the radio's right rear positive speaker output.
- Connect the **Purple/Black** wire to the radio's right rear negative speaker output.
- Connect the Light Green wire to the parking brake wire of the aftermarket navigation radio.
- Connect the **Blue/Pink** wire to the VSS or speed sense wire of the aftermarket navigation radio.
- Connect the Green/Purple wire to the reverse wire of the aftermarket navigation radio.
- Plug the AUX/3.5mm or BT/USB RCA's to the aftermarket radio's AUX input.

Initialize the XSVI interface

With all connections made and harnesses connected to the vehicle, turn the ignition key to the ON position for 30 seconds, then turn the key OFF, then ON again to test the radio.

ASWC (if installing)

After the XSVI is initialized, plug in the ASWC into the 12-pin harness of the XSVI-6515-NAV and refer to the ASWC instructions.

1-8	300-221-0932	🜉 metraonline.com
REV. 5/10/12	© COPYRIGHT 2004-2011	METRA ELECTRONICS CORPORATION

X5VI-6515-NAV

Wiring the XSVI-6515-NAV

- Connect the Yellow wire to the radio's 12-volt battery or memory wire.
- Connect the **Black** wire to the radio's ground wire.
- Connect the Red wire to the ignition wire of the aftermarket radio
- Connect the **Orange/White** wire to the illumination wire of the aftermarket radio. If the aftermarket radio has no illumination wire, tape off the orange wire.
- Connect the Blue wire to the antenna turn on wire of the aftermarket radio.
- Connect the **Blue/White** wire to the radio's amp turn on wire.
- Connect the White wire to the left front positive speaker output of the aftermarket radio.
- Connect the White/Black wire to the left front negative speaker output of the aftermarket radio
- Connect the Gray wire to the right front positive speaker output of the aftermarket radio
- Connect the Gray/Black wire to the right front negative speaker output of the aftermarket radio
- Connect the Green wire to the radio's left rear positive speaker output.
- Connect the Green/Black wire to the radio's left rear negative speaker output.
- Connect the Purple wire to the radio's right rear positive speaker output.
- Connect the Purple/Black wire to the radio's right rear negative speaker output.
- Connect the **Light Green** wire to the parking brake wire of the aftermarket navigation radio.
- Connect the Blue/Pink wire to the VSS or speed sense wire of the aftermarket navigation radio.
- Connect the Green/Purple wire to the reverse wire of the aftermarket navigation radio.
- Plug the AUX/3.5mm or BT/USB RCA's to the aftermarket radio's AUX input.

Initialize the XSVI interface

With all connections made and harnesses connected to the vehicle, turn the ignition key to the ON position for 30 seconds, then turn the key OFF, then ON again to test the radio.

ASWC (if installing)

After the XSVI is initialized, plug in the ASWC into the 12-pin harness of the XSVI-6515-NAV and refer to the ASWC instructions.

<u> </u> 1-8	00-221-0932	🜉 metraonline.com
REV. 5/10/12	© COPYRIGHT 2004-2011	METRA ELECTRONICS CORPORATION

XSVI-6515-NAV