



INSTALLATION INSTRUCTIONS FOR PART 95-7345B

APPLICATIONS


Kia Optima 2011-up 95-7345B

KIT FEATURES

- Double DIN head unit provision
- *Painted matte black to match factory finish*

KIT COMPONENTS

- A) DDIN Brackets
- B) Trim Panel
- C) (3) #8 x 3/8" Phillips Pan Head Screws

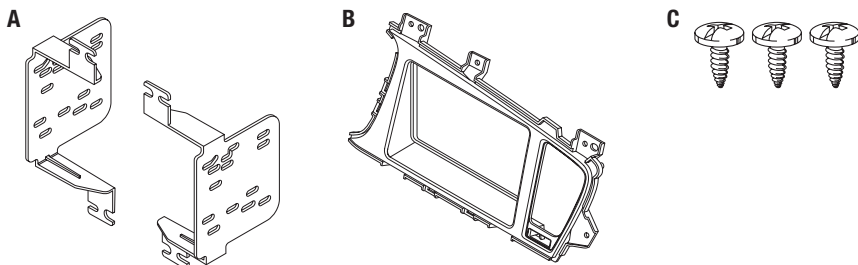

WIRING & ANTENNA CONNECTIONS (Sold Separately)

Wiring Harness:


- 70-7304 - Hyundai/Kia 2010-up

Antenna Adapter:

- Not Required

TOOLS REQUIRED

Panel Removal Tool • Phillips Screwdriver • Socket Wrench



METRA. THE WORLD'S BEST KITS.™



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION



95-7345B

Table of Contents

Dash Disassembly

- Kia Optima 2011-up 3-4

Kit Assembly

- Vent transfer 5
- ISO DIN head unit provision with pocket 6

Caution

Metra recommends disconnecting the negative battery terminal before beginning any installation. All accessories, switches, and especially air bag indicator lights must be plugged in before reconnecting the battery or cycling the ignition.

****NOTE: Refer also to the instructions included with the aftermarket radio.***



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.




**Metra recommends MECP
certified technicians**


Dash Disassembly

1. Unsnap and remove trim from around top center to passenger side dash. (Figure A)
2. Unsnap panel from outside edge of driver's side dash. (Figure B)
3. Remove two screws from knee panel and pull top of panel back so it doesn't overlap the instrument cluster. (Figure C)
4. Remove two screws from the driver's side vent trim and remove. (Figure D)


Continued on next page

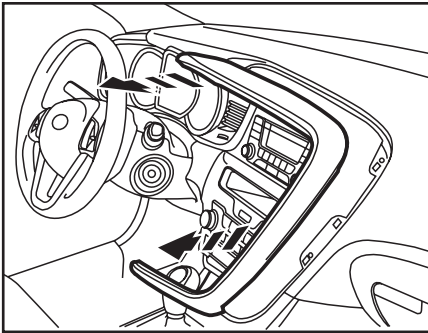


(Figure A)

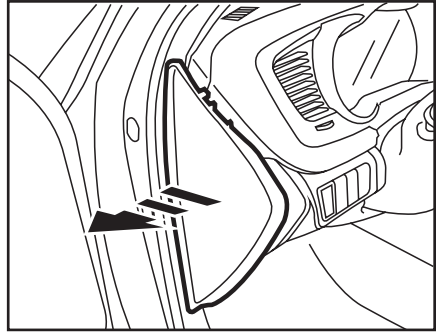

(Figure B)

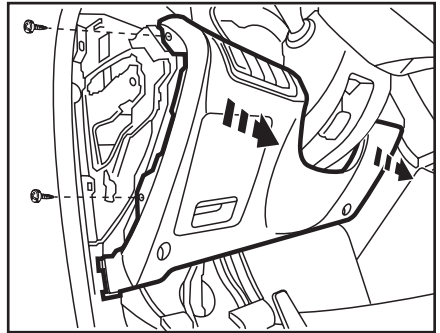

(Figure C)

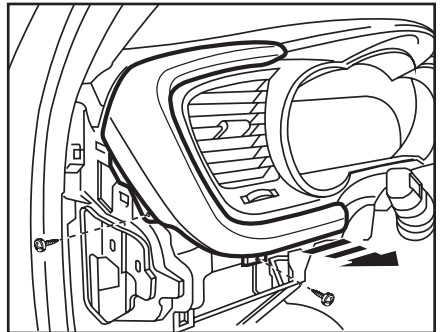


(Figure D)


Dash Disassembly

5. Remove five screws from instrument cluster and remove. (Figure E)
6. Remove four screws from the climate controls and remove. (Figure F)
7. Remove six screws securing the radio trim panel and remove. (Figure G)
8. Remove four screws securing the factory radio chassis and remove it. (Figure H)


Continue to kit assembly

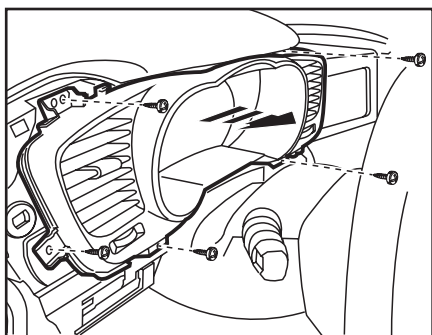


(Figure E)

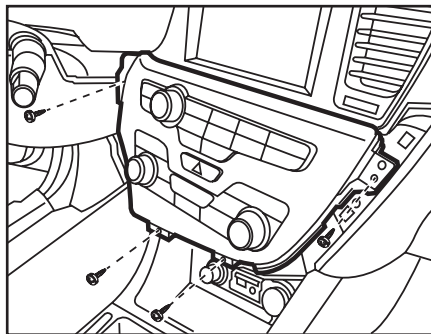

(Figure F)

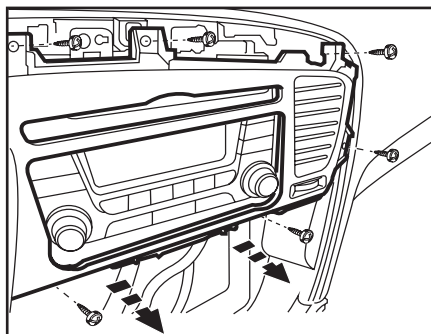

(Figure G)

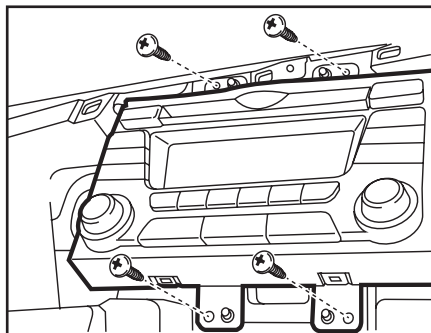

(Figure H)




95-7345B


Kit Assembly

1. Remove three screws and remove the vent from the factory radio panel. (Figure A)
2. Using the supplied #8 x 3/8" pan head phillips screws, install the vent to the kits trim panel. (Figure B)

Continued on next page

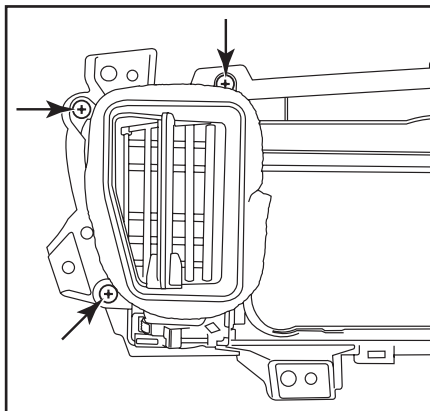

(Figure A)

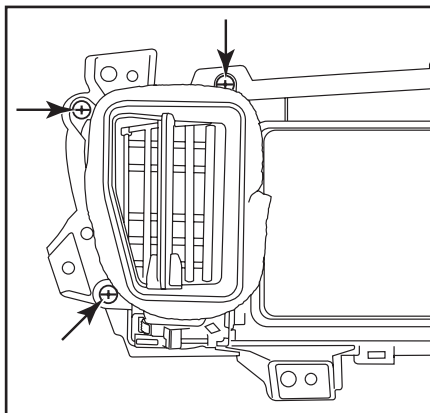


(Figure B)




Kit Assembly 95-7345B

Double DIN head unit provisions


1. Mount the radio to the DDIN Brackets with the screws supplied with the unit. (Figure A)
2. Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXCESS. Re-connect the negative battery terminal and test the unit for proper operation.
3. Mount the radio/bracket assembly into the dash. (Figure B)
4. Snap the radio trim plate over the radio/bracket assembly and reassemble dash in reverse order of disassembly. (Figure C)

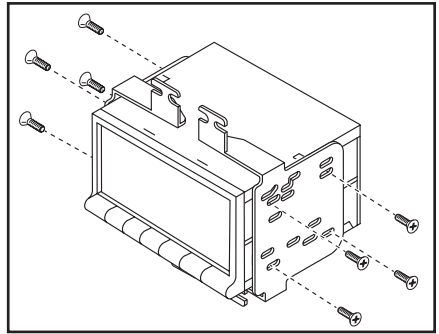

(Figure A)

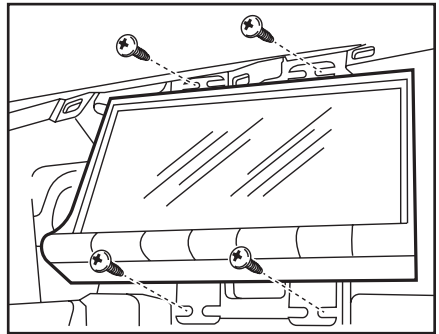

(Figure B)

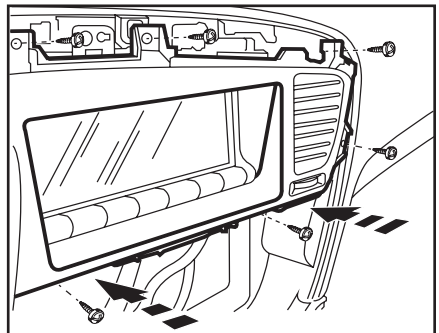

(Figure C)



Notes



INSTALLATION INSTRUCTIONS FOR PART 95-7345B

REV. 9/07/11



1-800-221-0932



metraonline.com

© COPYRIGHT 2004-2011 METRA ELECTRONICS CORPORATION

METRA. THE WORLD'S BEST KITS.™