



INSTALLATION INSTRUCTIONS FOR PART 95-7406

APPLICATIONS Nissan Titan 2004-2005

Nissan Titan (Without Dual Zone
Climate Controls) 2004-2007

Nissan Pathfinder Armada 2004-2005

95-7406




KIT FEATURES


- Double DIN Radio Provision
- Stacked ISO Mount Units Provision
- Painted To Match Factory Dash

KIT COMPONENTS


- A) Double DIN Radio Housing • B) Radio Housing Trim Panel • C) Double DIN Brackets
- D) Double DIN Trim Plate • E) (6) PPH-38 Screws • F) (6) Panel Clips
- G) Two Sided Tape (Not Shown)

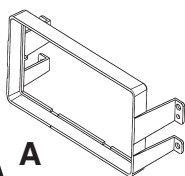


A

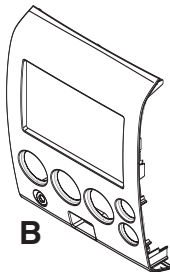

B

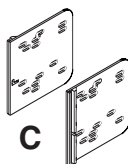

C

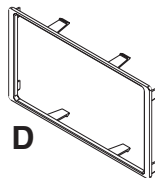

D



F




E

WIRING AND ANTENNA CONNECTIONS
(Sold Separately)

- 70-7550 - Nissan harness 1995-up
- 70-7551 - Nissan amplified harness 1995-up

TOOLS REQUIRED:

- Torx T-10 Driver • Small Flat Blade Screwdriver/ Panel Removal Tool
- Phillips Screwdriver



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION



TABLE OF CONTENTS

Dash Disassembly

- Nissan Titan 2004-2007 1,2**
- Pathfinder Armada 2004-2005 1,2**

Kit Assembly

- Pre-Kit Assembly. 3**
- Double DIN/Stacked Radio Provision 4**

Final Assembly 4

***Note:**

Refer also to the instructions included with the aftermarket radio.



KNOWLEDGE IS POWER

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry. Log onto www.installerinstitute.com or call 800-354-6782 for more information and take steps toward a better tomorrow.

Nissan Titan 2004-2007


Nissan Pathfinder Armada 2004-2005

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove entire panel including the radio and climate controls. (Figure A)
- 3 Remove (4) Phillips screws to remove radio from sub-dash. (Figure B)
- 4 Unsnap and remove the outer trim rings around a/c control knobs. (Figure C)


NOTE: The small round Airbag sticker also needs to be removed from the factory panel and placed onto the 99-7406 radio housing panel. (A round piece of double-sided tape is provided in case the factory sticker is not strong enough.) (Figure C)

Continue to kit assembly.


A

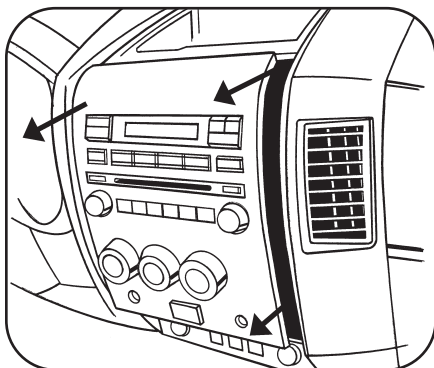

B

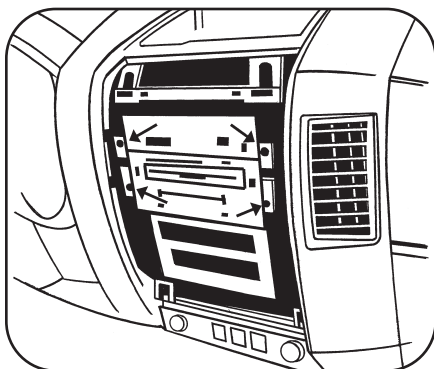

C

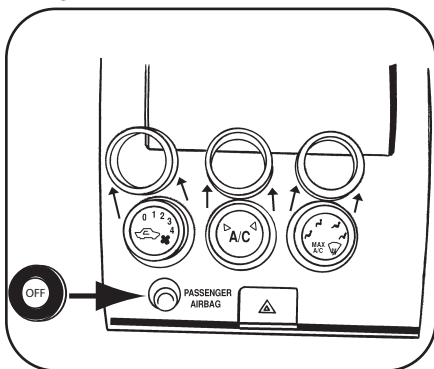



95-7406 DASH DISASSEMBLY

Nissan Titan 2004-2007

Nissan Pathfinder Armada 2004-2005


5 Remove (4) T-10 Torx screws from the a/c controls to remove from the factory radio trim panel. (Figure D)

6 Unclip and remove the Hazard Light switch assembly. (Figure D)

7 Remove (2) T10 Torx screws from the passenger air bag off light assembly and remove. (Figure D)

NOTE: The small round sticker also needs to be removed from the factory panel and placed onto the 99-7406 radio housing trim panel.

Continue to pre-kit assembly.

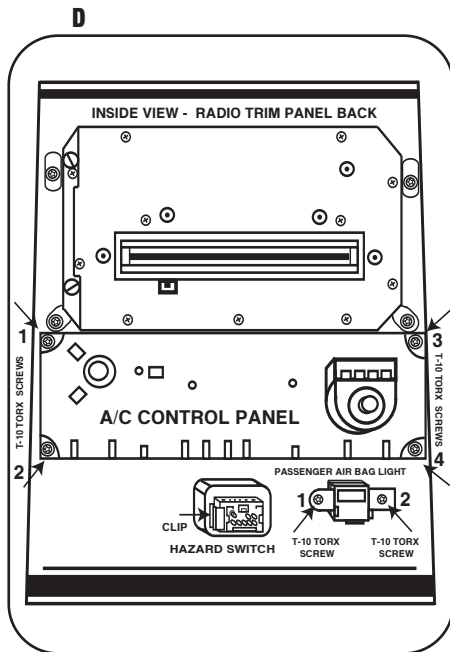

Nissan Titan 2004-2007

Nissan Pathfinder Armada 2004-2005

1 Attach the a/c control to the 99-7406 Radio Housing Trim Panel using the supplied (4) Phillips PPH-38 screws. (Figure A)





2 Snap the outer trim rings onto the a/c control knobs. (Figure B)

3 Attach the passenger air bag off light assembly to the 99-7406 Radio Housing Trim Panel using the supplied (2) Phillips PPH-38 screws. Also, apply to air bag button the small round airbag sticker previously removed in Step 4 dash disassembly. (Figure C)

4 Snap the hazard light switch into the 99-7406 Radio Housing Trim Panel. (Figure D)

5 Attach the (6) panel clips to the 99-7406 radio housing panel using the factory radio panel as a reference for clip positioning.

Continue to kit assembly.

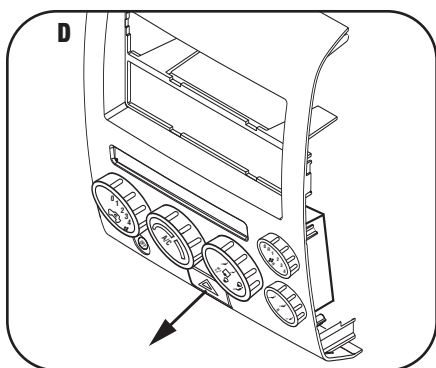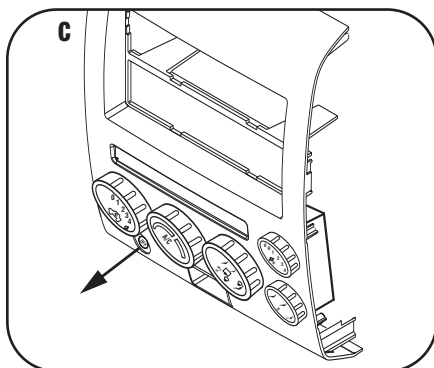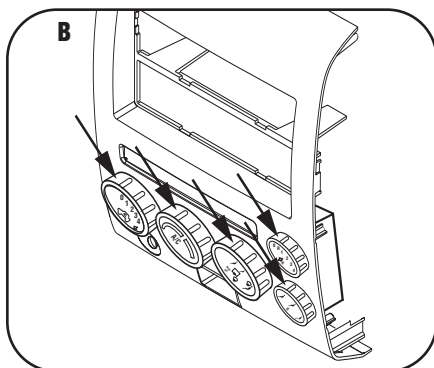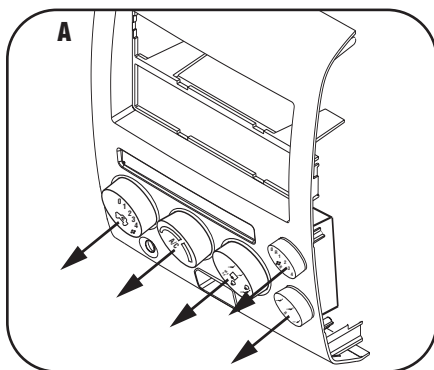


DOUBLE DIN RADIO PROVISION

**Note: Refer also to the instructions included with the aftermarket radio.*

- 1 Snap the Double DIN brackets to the inside edge of the Double DIN radio housing. (Figure A)
- 2 Slide the Double DIN radio into the Double DIN bracket/radio housing assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure B)
- 3 Snap the Double DIN trim-plate onto the housing/radio assembly. (Figure B)

NOTE: (2) DIN units could be stacked using the same process shown above for Double DIN.

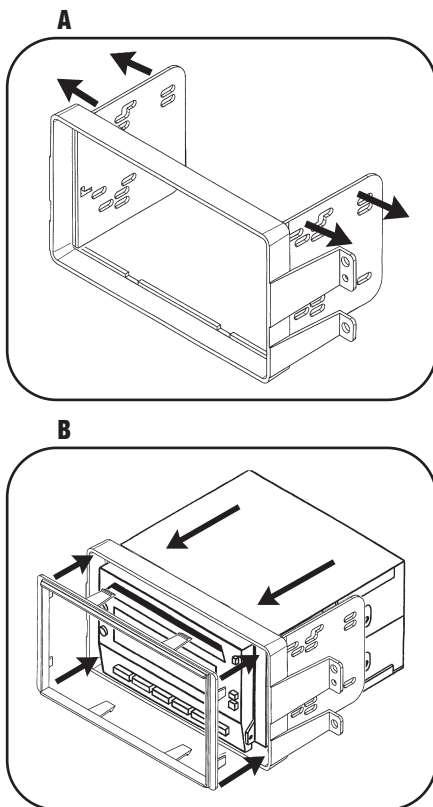

FINAL ASSEMBLY

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter from Metra or AXXESS. Re-connect the negative battery terminal and test the unit for proper operation.
- 2 Secure the housing/radio assembly into the dash.
- 3 Snap the Radio Housing Trim Panel over housing/radio assembly.
- 4 Reassemble the remaining radio and dash assemblies in reverse order of disassembly.



NOTES

[illegible]

95-7406 INSTRUCTIONS



1-800-221-0932



www.metraonline.com

REV. 05/01/09 © COPYRIGHT 2004-2009 METRA ELECTRONICS CORPORATION INST95-7406