



INSTALLATION INSTRUCTIONS FOR PART 95-7504

APPLICATIONS

Mazda 3 2004-2007

95-7504


KIT FEATURES

- Double DIN Radio Provision
- Stacked ISO Mount Units Provision
- Bonus Display Replacement Pocket
- Retains Factory Display For Automatic Climate Controls



KIT COMPONENTS

- A) Radio Housing • B) Double DIN Brackets • C) Double DIN Trim plate •
D) Display Replacement Pocket • E) Display Retention Brackets

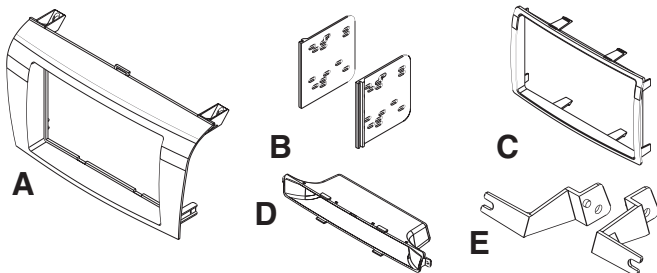

TOOLS REQUIRED:

- Small Flat Blade Screwdriver/ Panel Removal Tool
• Phillips Screwdriver



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2007 METRA ELECTRONICS CORPORATION



TABLE OF CONTENTS

Dash Disassembly

- Mazda 3 2004-2007 1

Kit Assembly

- Display Brackets/Pocket Assembly 2
- Double DIN Radio Provision 3
- Stacked ISO Units Provision 4

Final Assembly 5,6




***Note:**

Refer also to the instructions included with the aftermarket radio.

MAZDA 3 2004-2007


- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove display trim panel above radio. **Tip:** Open glove box and start in middle of panel working towards drivers side first because last connection on far passenger side is a hook. (Figure A)
- 3 Remove (2) Phillips screws exposed at top of radio then unclip and remove radio. **Note:** Display is attached to radio brackets and will be removed at same time as radio. (Figure B)
- 4 Remove (2) Phillips screws on back of display trim panel securing display trim then unclip and remove. (Figure C)

Continue to display/pocket assembly.

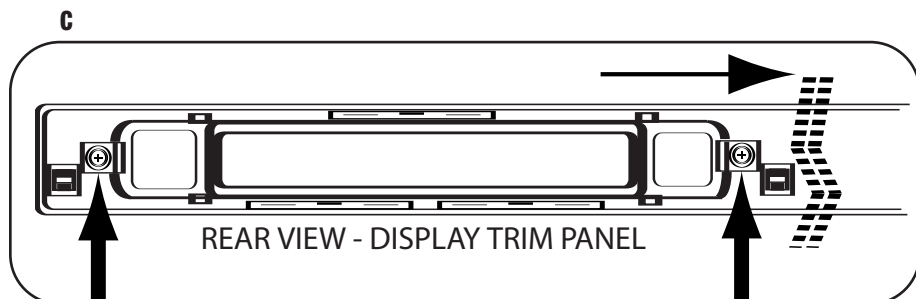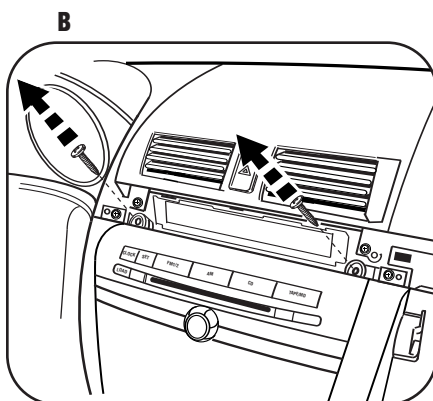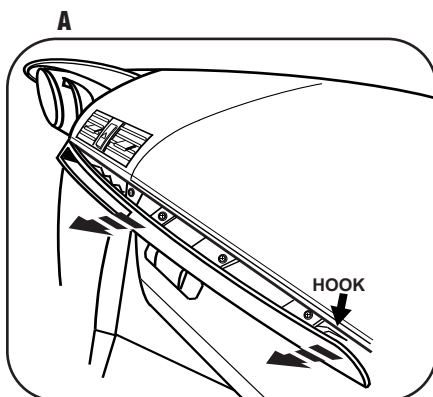


DISPLAY BRACKETS/POCKET ASSEMBLY**MAZDA 3 2004-2007****AUTOMATIC CLIMATE CONTROL VEHICLES**

- 1 Using the factory hardware attach the display retention brackets to the display unit.
- 2 Remove the (2) Phillips screws in the sub dash. (Figure A)
- 3 Secure the display unit into the sub dash using the screws removed in the previous step.

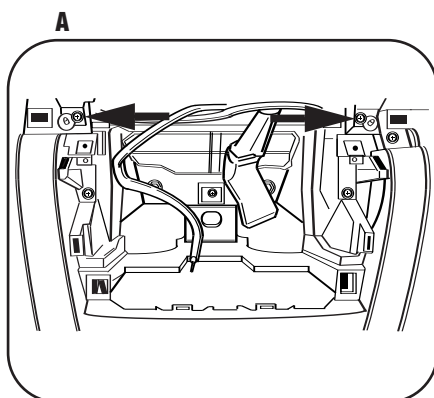**MANUAL CLIMATE CONTROL VEHICLES**

- 1 Using the (2) Phillips screws removed in step 4 of Dash Disassembly secure the display replacement pocket to the back of the display trim panel. (Figure B)

Continue to kit assembly.

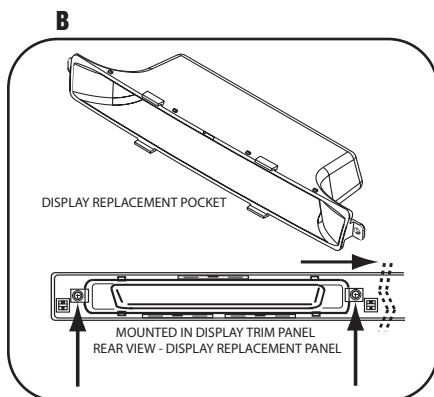


DOUBLE DIN RADIO PROVISION

**Note: Refer also to the instructions included with the aftermarket radio.*

- 1** Snap the Double DIN brackets to the inside edge of the radio housing.
(Figure A)
- 2** Slide the Double DIN radio into the bracket/radio housing assembly and secure the radio to the assembly using the screws supplied with the radio. Snap the trim plate onto the front of the radio housing. (Figure B)

Continue to final assembly.

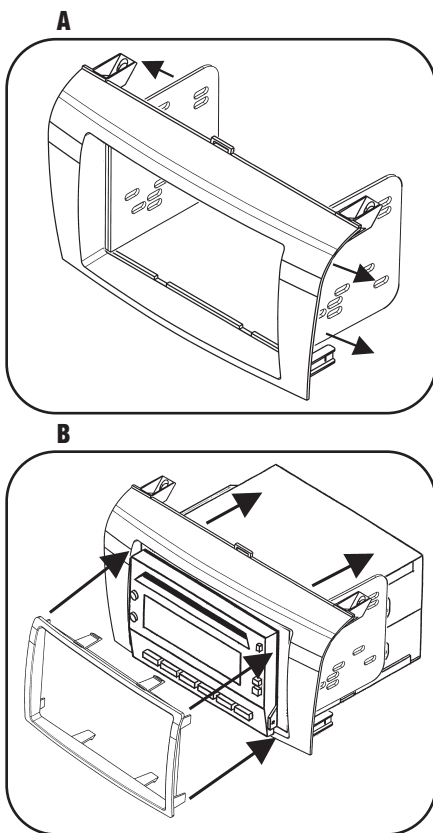


STACKED ISO UNITS PROVISION

**Note: Refer also to the instructions included with the aftermarket radio.*


- 1 Snap the Double DIN brackets to the inside edge of the radio housing. (Figure A)
- 2 Slide the stacked ISO units into the bracket/radio housing assembly and secure the units to the kit using the screws supplied with the units. Snap the trim plate onto the front of the radio housing. (Figure B)

Continue to final assembly.


A

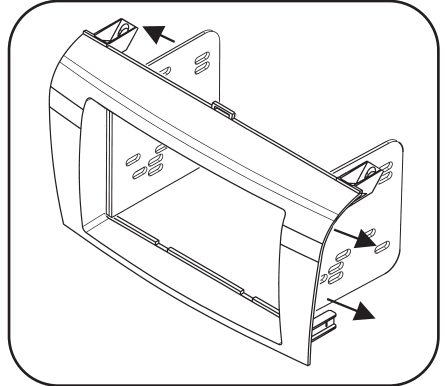

B

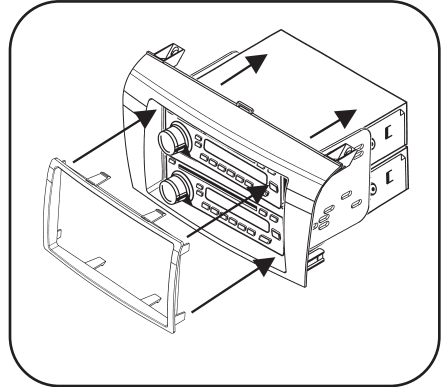

FINAL ASSEMBLY

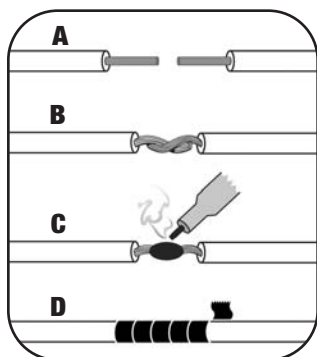

(A) Strip wire ends back 1/2"

B) Twist ends together



C) Solder

D) Tape

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.

Note: When inserting the 99-7504 into the sub dash be aware of the locations pointed out in Figure B.

If the 99-7504 does not snap in correctly the result will be a noticeable gap on each side of the installation kit. (Figure C)

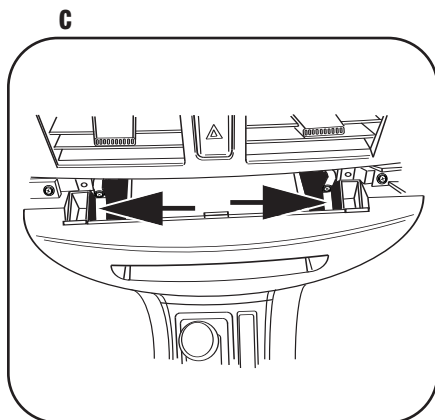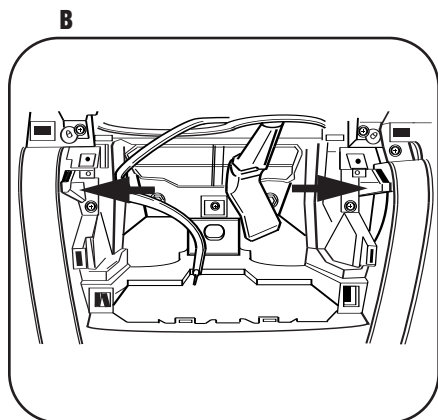

FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

METRA / EIA WIRING CODE

12V Ignition / Acc.	Red	Right Front (+)	Gray
12V Batt / Memory	Yellow	Right Front (-).	Gray/ Black
Ground	Black*	Left Front (+)	White
Power Antenna.	Blue	Left Front (-).	White / Black
Amp Turn-On	Blue / White	Right Rear (+)	Violet
Amp Ground.	Black / White	Right Rear (-)	Violet / Black
Illumination	Orange	Left Rear (+)	Green
Dimmer	Orange / White	Left Rear (-).	Green / Black

***NOTE:** When a Black wire is not present, ground radio to vehicle chassis.
All colors may not be present on all leads due to manufacturer's specifications.

[illegible]



95-7504

NOTES

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



95-7504

NOTES

[illegible]

95-7504 INSTRUCTIONS



1-800-221-0932



www.metraonline.com

REV. 05/16/07 © COPYRIGHT 2007 METRA ELECTRONICS CORPORATION

INST95-7504