

98-8999

Volkswagen Pocket



- 1** Snap Pocket Trimplate VW (labeled TP-9008) onto the front of the Pocket. Locate the X-5599L bracket and mount it to the "L" side of the Pocket with (3) #6 x 1/4" Phillips Flat Head Screws. Next locate the X-5599R bracket and mount it to the "R" side of the Pocket with (3) #6 x 1/4" Phillips Flat Head Screws.

See figure A


- 2** Pull out on the plastic tray separating the dash cavity and remove the tray ("A"). Position the Pocket so each Bracket is configured with (2) screws on the top and (1) screw on bottom ("B"). Slide the pocket into the dash opening until the side clips engage.

See figure B

POCKET ASSEMBLY

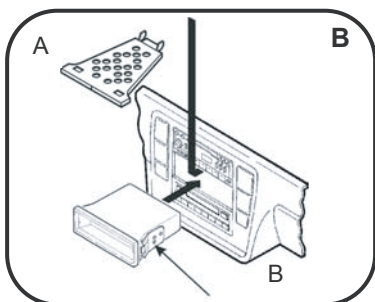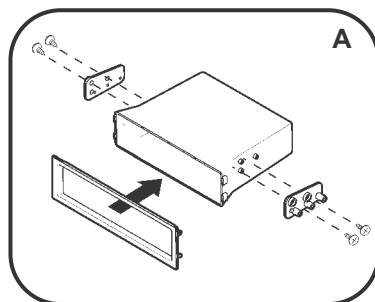

98-8999

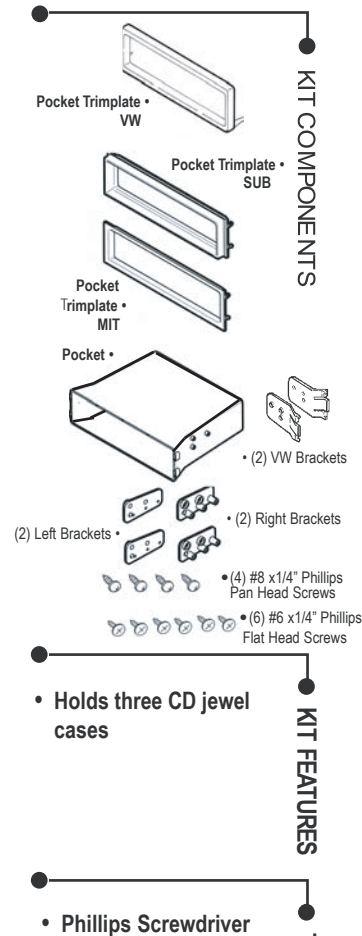

VEHICLE APPLICATIONS

Mitsubishi

- 3000 GT 1991-1999
- Diamante 1997-2004
- Eclipse 1995-2005
- Galant* 1994-2007
- * With Manual Climate Control
- Mirage 1997-2003
- Montero 1996-2005
- Montero Sport 2000-2004

Subaru

- Baja 2003-2005
- Forester 1998-2006
- Impreza 1993-2005
- Impreza WRX 2002-2005
- Legacy 1995-2004
- Outback 2000-2004

Volkswagen

- Golf 2001-2005
- Jetta** 2001-2005
- ** Not Including New A5
- Passat 2001-2005



Questions?
Call the Help Line:
(800)253 TECH


INSTALLATION INSTRUCTIONS

Mitsubishi Pocket

Subaru Pocket


POCKET ASSEMBLY

POCKET ASSEMBLY

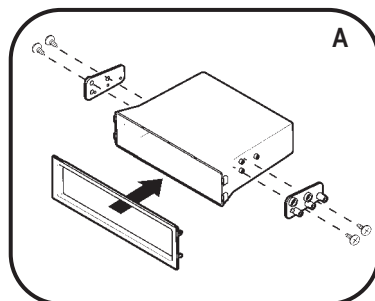

- 1 Snap Pocket Trimplate MIT onto the front of the Pocket. Locate one of the Left Brackets and mount it to the "L" side of the Pocket with (2) #6 x 1/4" Phillips Flat Head Screws. Next locate one of the Right Brackets and mount it to the "R" side of the Pocket with (2) #6 x 1/4" Phillips Flat Head Screws.

See figure A

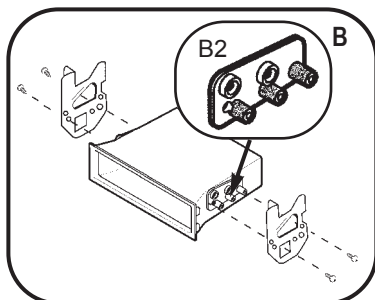


- 2 Mount the factory brackets to the shaded bosses (Fig. B2) with (4) #8 x 1/4" Phillips Pan Head Screws supplied and mount the entire assembly to the sub-dash.

See figure B

- 1 Snap Pocket TrimplateSUB onto the front of the Pocket. Locate one of the Left Brackets and mount it to the "L" side of the Pocket with (2) #6 x 1/4" Phillips Flat Head Screws. Next locate one of the Right Brackets and mount it to the "R" side of the Pocket with (2) #6 x 1/4" Phillips Flat Head Screws.

See figure A

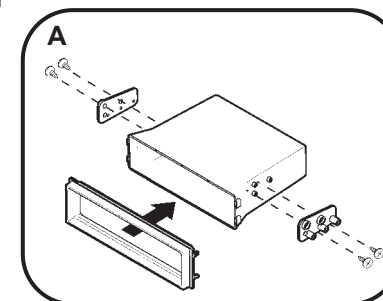

- 2 Mount the factory brackets to the shaded bosses (Fig. B2) with (4) #8 x 1/4" Phillips Pan Head Screws supplied and mount the entire assembly to the sub-dash.

See figure B

