



## INSTALLATION INSTRUCTIONS FOR PART 99-3306

### APPLICATIONS

# Chevrolet Aveo 2007

# 99-3306


#### KIT FEATURES

- DIN Mount Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Mount Radio Provision
- Stacked ISO Units Provision



#### KIT COMPONENTS

- A) Radio Housing • B) ISO Brackets • C) ISO Trim Plate • D) Double DIN Brackets  
• E) Double DIN Trim Plate • F) Pocket

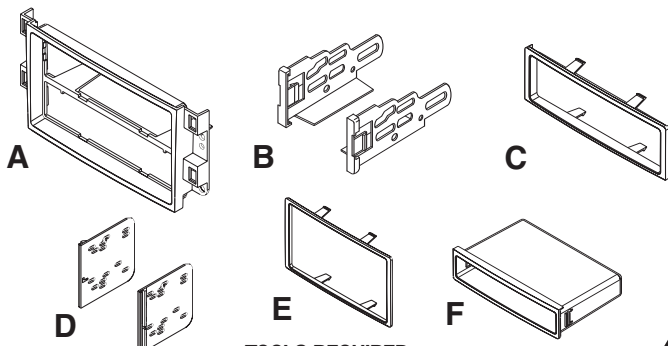

#### TOOLS REQUIRED:

- Small Flat Blade Screwdriver/ Panel Removal Tool  
• Phillips Screwdriver • Socket Set



1-800-221-0932



[www.metraonline.com](http://www.metraonline.com)

© COPYRIGHT 2004 METRA ELECTRONICS CORPORATION



## **TABLE OF CONTENTS**

### **Dash Disassembly**

**- Chevrolet Aveo 2007 ..... 1**

### **Kit Assembly**

**- DIN Mount Radio Provision with Pocket ..... 2**  
**- ISO Mount Radio Provision with Pocket ..... 3**  
**- Double DIN Radio Provision ..... 4**  
**- Stacked ISO Units Provision ..... 5**

**Final Assembly ..... 6**



#### **\*Note:**

**Refer also to the instructions included with the aftermarket radio.**

## CHEVROLET AVEO 2007

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove trim panel around radio. (Figure A)
- 3** Remove (4) 9/32" screws securing the radio. Unplug and remove radio. (Figure B)

*Continue to kit assembly.*

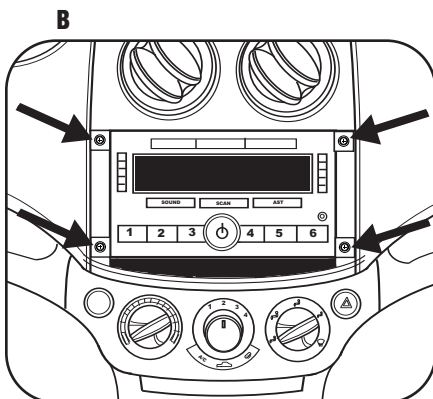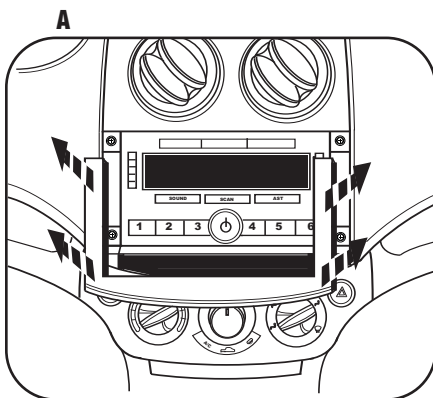


## DIN MOUNT RADIO PROVISION WITH POCKET

*\*Note: Refer also to the instructions included with the aftermarket radio.*


- 1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking outward. (Figure A)
- 2 Slide the aftermarket radio into the DIN cage until it snaps into place. (Figure B)
- 3 Snap the pocket into the radio housing. (Figure C)

*Continue to final assembly.*


**A**

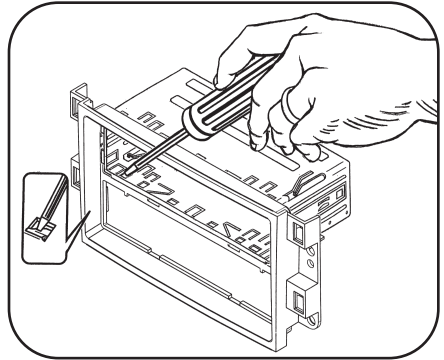

**B**

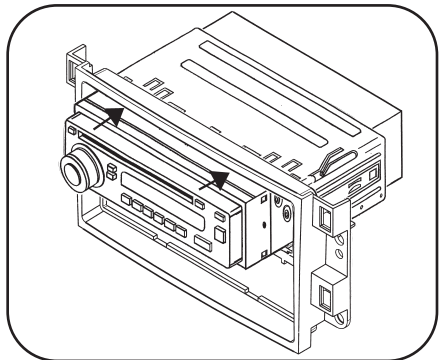

**C**



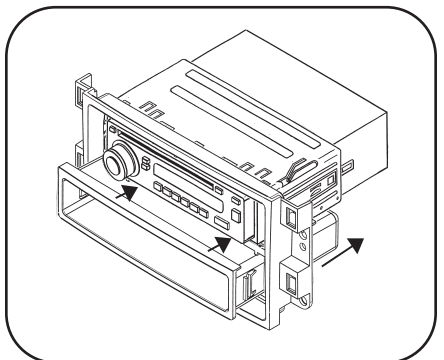


**ISO MOUNT RADIO PROVISION WITH POCKET**

***\*Note: Refer also to the instructions included with the aftermarket radio.***

- 1** Mount the ISO Brackets to the radio using the screws supplied with the radio. (Figure A)
- 2** Slide the radio into the radio opening until it snaps into place. (Figure B)
- 3** Snap the ISO Trim Plate onto the front of the Radio Housing. (Figure B)
- 4** Snap the pocket into the radio housing. (Figure C)

*Continue to final assembly.*

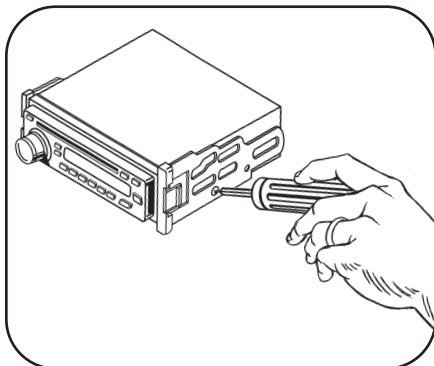
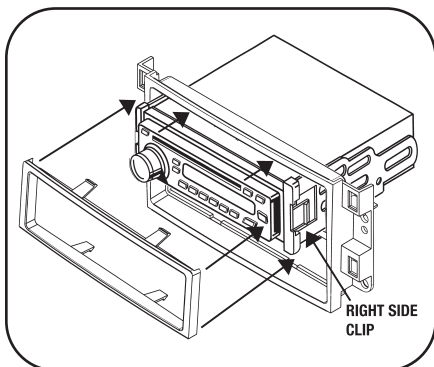
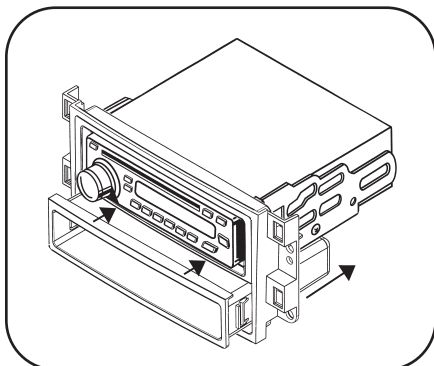
**A****B****C**

**DOUBLE DIN MOUNT RADIO PROVISION**

*\*Note: Refer also to the instructions included with the aftermarket radio.*

- 1** Cut and remove the center bar from the radio housing. (Figure A)
- 2** Snap the Double DIN brackets to the inside edge of the radio housing. (Figure B)
- 3** Slide the Double DIN radio into the bracket/radio housing assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure C)
- 4** Snap the Double DIN trim-plate onto the front of the housing/radio assembly. (Figure C)

*Continue to final assembly.*

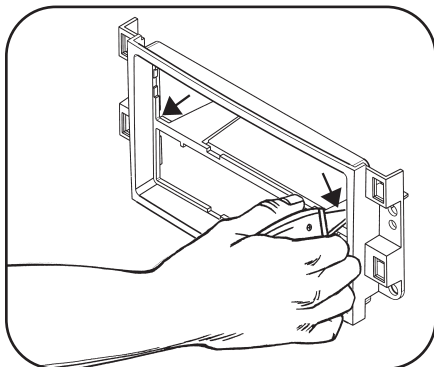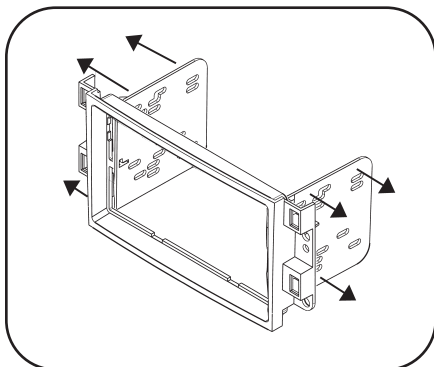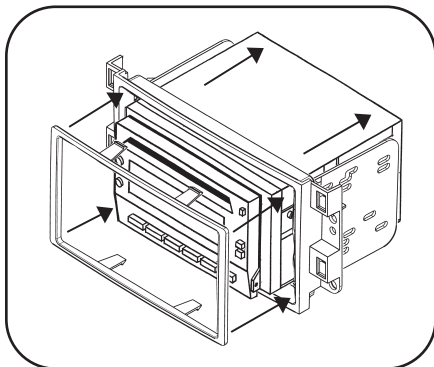**A****B****C**


## STACKED ISO UNITS PROVISION

*\*Note: Refer also to the instructions included with the aftermarket radio.*


- 1 Cut and remove the center bar from the radio housing. (Figure A)
- 2 Snap the Double DIN brackets to the inside edge of the radio housing. (Figure B)
- 3 Slide the stacked ISO units into the bracket/radio housing assembly and secure the units to the assembly using the screws supplied with the units. (Figure C)
- 4 Snap the Double DIN trim-plate onto the front of the housing/radio assembly. (Figure D)

*Continue to final assembly.*


**A**

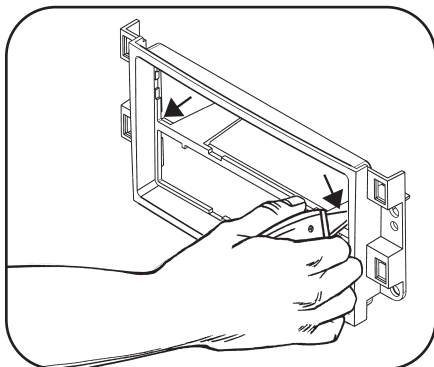


**B**

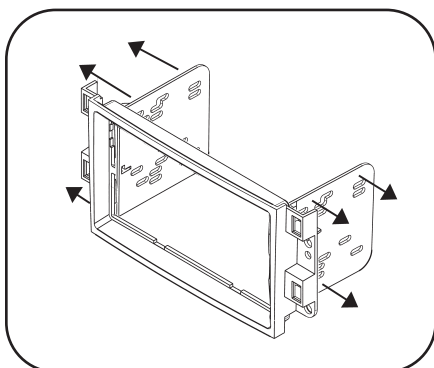


**C**

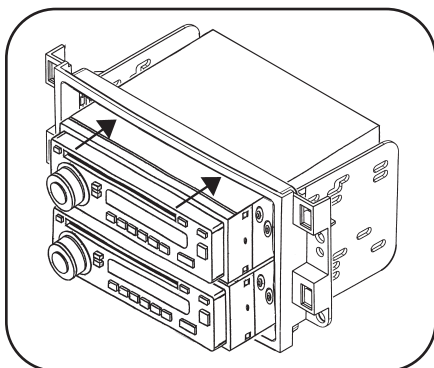

**D**

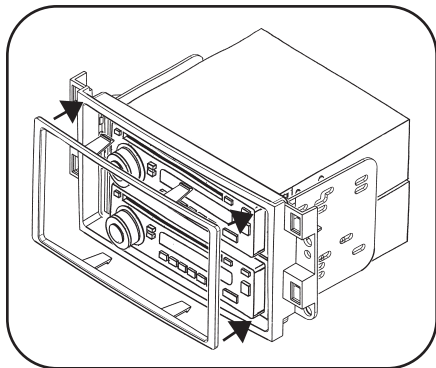

## **FINAL ASSEMBLY**

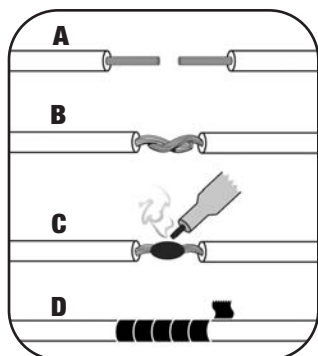

***(A) Strip wire ends back 1/2"***

***B) Twist ends together***

***C) Solder***

***D) Tape***

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.

## **FINAL WIRING CONNECTIONS**

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

### **METRA / EIA WIRING CODE**

12V Ignition / Acc. .... Red	Right Front (+) ..... Gray
12V Batt / Memory. .... Yellow	Right Front (-). .... Gray/ Black
Ground. .... Black*	Left Front (+) ..... White
Power Antenna. .... Blue	Left Front (-). .... White / Black
Amp Turn-On ..... Blue / White	Right Rear (+) ..... Violet
Amp Ground. .... Black / White	Right Rear (-). .... Violet / Black
Illumination ..... Orange	Left Rear (+) ..... Green
Dimmer ..... Orange / White	Left Rear (-) ..... Green / Black

**\*NOTE:** When a Black wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.





## NOTES

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



## This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



**99-3306**

## NOTES

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

## **99-3306 INSTRUCTIONS**



**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**

REV. 11/24/06 © COPYRIGHT 2004 METRA ELECTRONICS CORPORATION

INST99-3306