



## INSTALLATION INSTRUCTIONS FOR PART 99-5807

### APPLICATIONS

#### FORD

Edge 2007-2008  
Expedition 2007-2008  
Explorer 2005-2008  
F-150 2004-2008  
Five-Hundred 2005-2007  
Freestyle 2005-2007  
Mustang 2005-2009

#### LINCOLN

Mark LT 2004-2008

#### MERCURY

Montego 2005-2007  
Mountaineer 2005-2008  
Sable 2008

# 99-5807





#### KIT FEATURES

- DIN Mount Radio Provision with Pocket
- ISO Mount Radio Provision with Pocket
- Double DIN Mount Radio Provision
- Stacked ISO Units Provision





#### KIT COMPONENTS

A) Radio Housing (single DIN w/ pocket) • B) Radio Housing (double DIN / stacked ISO DIN) • C) Double DIN Brackets D) ISO Brackets E) Trim Plate

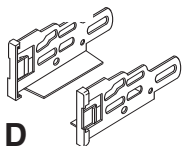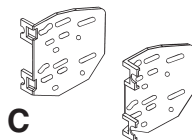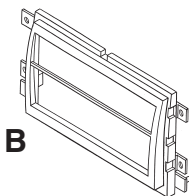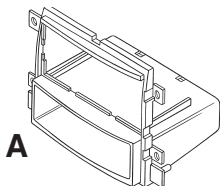

#### TOOLS REQUIRED:

Cutting Tool • Phillips Screwdriver • Socket Set



1-800-221-0932



[www.metraonline.com](http://www.metraonline.com)

© COPYRIGHT 2004-2008

METRA ELECTRONICS CORPORATION

## **TABLE OF CONTENTS**

### **Dash Disassembly**

- Ford Explorer 2005-07 .....	1
- Ford F-150 2004-07.....	2
- Ford Five Hundred 2005-07 .....	3
- Ford Freestyle 2005-07 .....	4
- Ford Mustang 2005-09 .....	5
- Lincoln Mark LT 2004-07 .....	2
- Mercury Montego 2005-07.....	3
- Mercury Mountaineer 2005-07.....	1

### **Kit Assembly**

- DIN Mount Radio Provision with Pocket .....	6
- ISO Mount Radio Provision with Pocket.....	7
- Double DIN Radio Provision .....	8
- Stacked ISO Units Provision .....	9

<u><b>Final Assembly</b></u> .....	10
------------------------------------	----

#### **\*Note:**

**Refer also to the instructions included with the aftermarket radio.**






#### **KNOWLEDGE IS POWER**

Enhance your installation and fabrication skills by enrolling in the most recognized and respected mobile electronics school in our industry.  
Log onto [www.installerinstitute.com](http://www.installerinstitute.com) or call 800-354-6782 for more information and take steps toward a better tomorrow.

## **FORD EXPLORER 2005-07**

## **MERCURY MOUNTAINEER 2005-07**

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Open center console and remove (2) Phillips screws then unclip and remove entire panel surrounding shifter. (Figure A)
- 3** Remove dash panel surrounding radio to access the factory radio screws. (Figure B)
- 4** Remove (4) 9/32" screws to remove the factory radio. (Figure C)

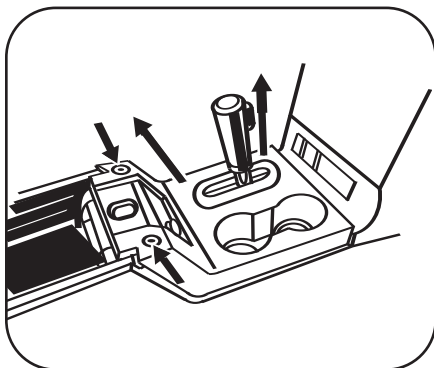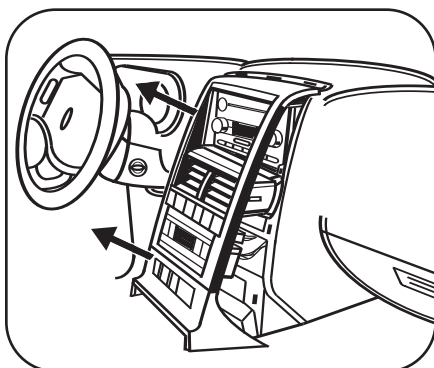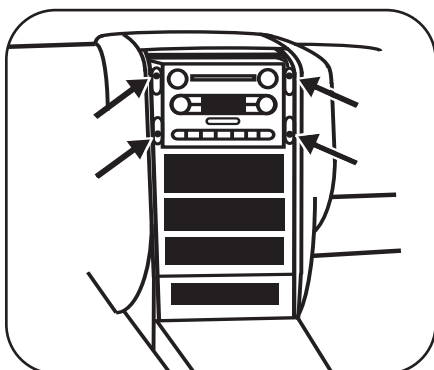
**A****B****C**

**FORD F-150 2004-07**  
**LINCOLN MARK LT 2004-07**


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unsnap and remove entire panel surrounding the radio and climate controls. (Figure A)
- 3** Remove (4) 9/32" screws to remove the factory radio. (Figure B)

*Continue to kit assembly.*

**A**

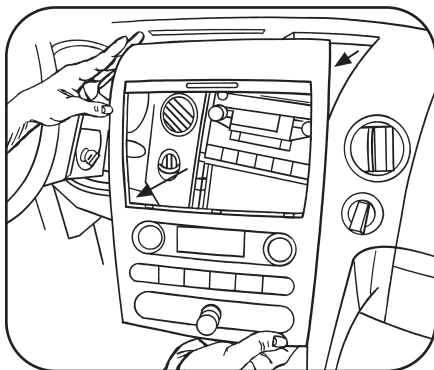

**B**

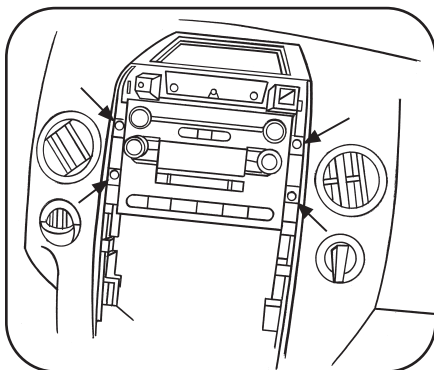


## **FORD FIVE HUNDRED 2005-07**

## **MERCURY MONTEGO 2005-07**


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the small rectangular trim around shift lever. (Figure A)
- 3** Unclip and remove the entire panel (including cup holders) surrounding the shift lever. (Figure B)
- 4** Remove (2) 9/32" screws at the bottom of the center radio/ climate control panel. (Figure C)
- 5** Unclip and remove the center panel. (Figure D)
- 6** Remove (4) 9/32" screws from the radio to remove.

*Continue to kit assembly.*


**A**

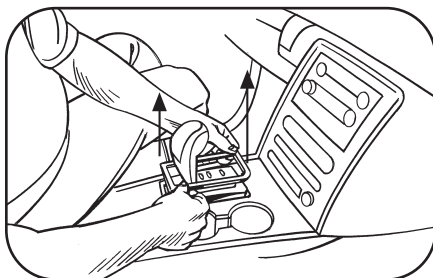


**B**

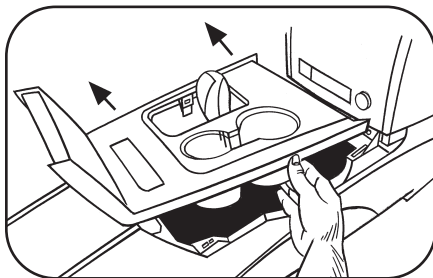


**C**

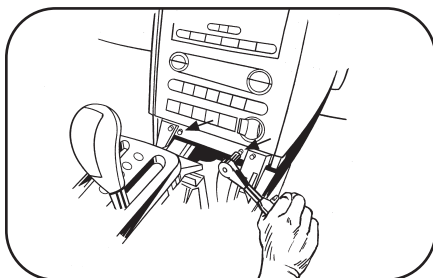

**D**

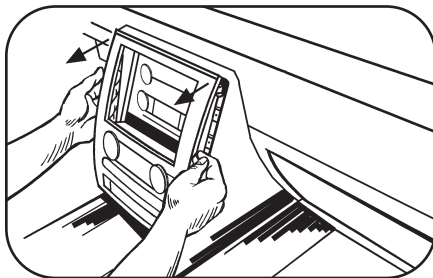

**E**


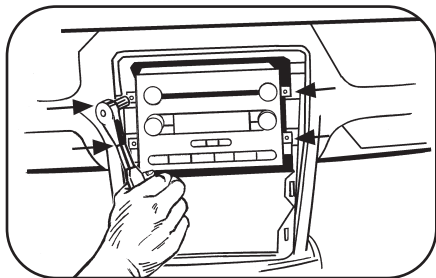


**FORD FREESTYLE 2005-07**

*\*Note: Refer also to the instructions included with the aftermarket radio.*

- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Unclip and remove the entire center panel surrounding the radio and a/c controls. (Figure A)
- 3** Remove (4) 9/32" screws from radio to remove. (Figure B)

*Continue to final assembly.*

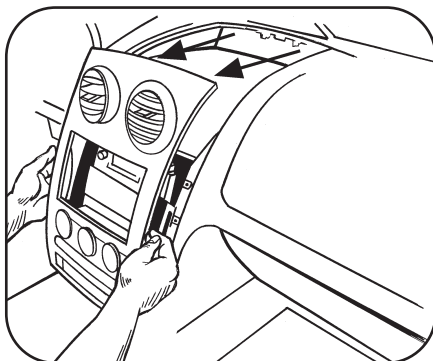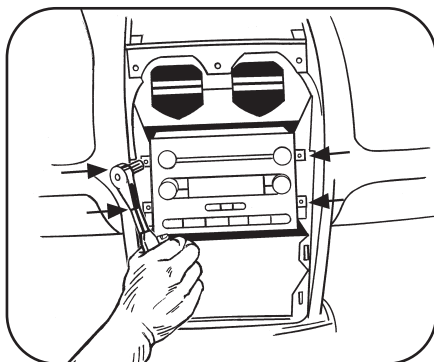
**A****B**

## **FORD MUSTANG 2005-09**


- 1** Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2** Remove the small rectangular shifter lever trim panel if equipped. (Figure A)
- 3** Remove (2) Phillips screws from under the center armrest at the back of the shifter trim panel (including cup holders). (Figure B)
- 4** Unclip and remove panel. (Figure B)
- 5** Unclip and remove the (2) center stack trim panels from the left and right side of the radio and climate controls. (Figure C)
- 6** Remove (6) 9/32" screws from center trim panel surrounding the radio and climate controls then unclip and remove panel. (Figure D)
- 7** Unclip and remove panel. (Figure E)

*Continue to kit assembly.*


**A**

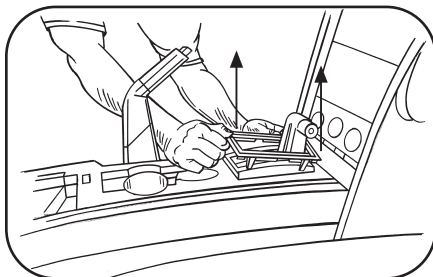


**B**

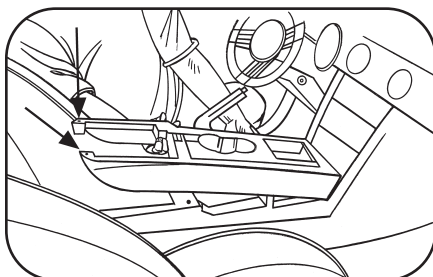


**C**

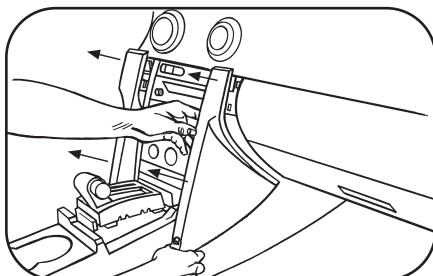

**D**

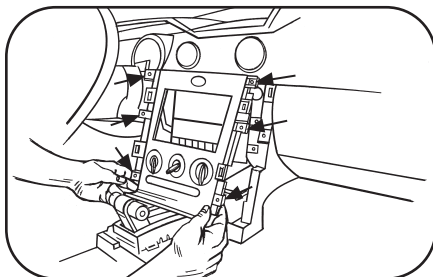

**E**


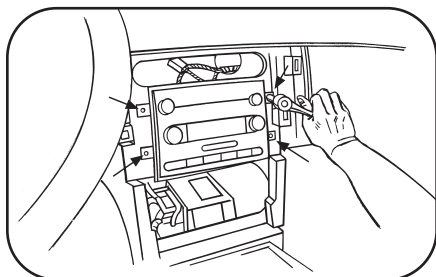


## DIN RADIO PROVISION WITH POCKET

*\*Note: Refer also to the instructions included with the aftermarket radio.*

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure A)
- 2** Slide the aftermarket head unit into the cage and secure. (Figure B)

*Continue to final assembly.*

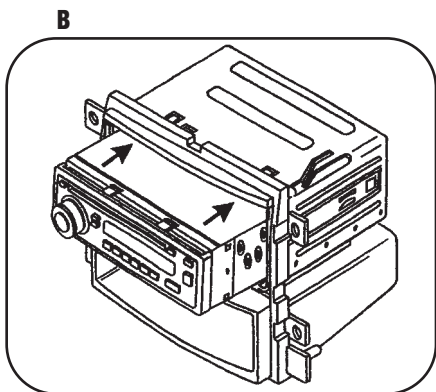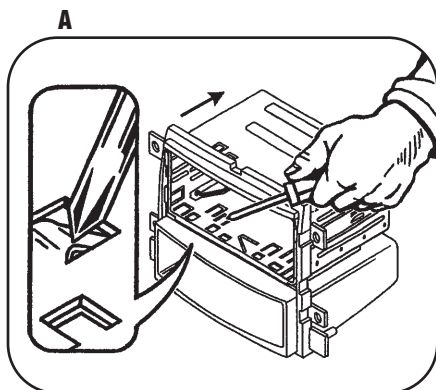




## ISO RADIO PROVISION WITH POCKET

***\*Note: Refer also to the instructions included with the aftermarket radio.***


- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure A)
- 2** Slide the head unit into the radio opening until the side clips engage. (Figure B)
- 3** Snap the Trim plate into the Radio Housing.

*Continue to final assembly.*

**A**

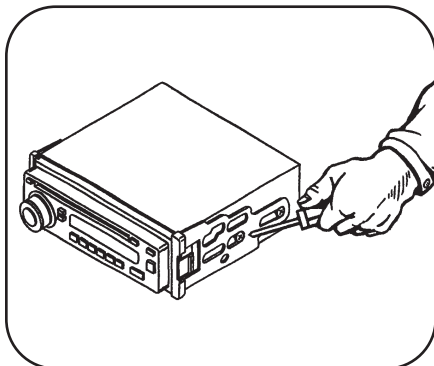

**B**

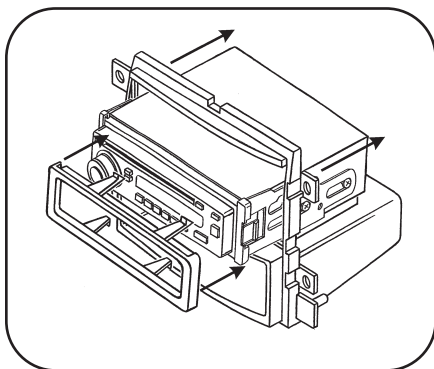

## DOUBLE DIN MOUNT RADIO PROVISION

*\*Note: Refer also to the instructions included with the aftermarket radio.*


- 1 Remove the center bar from the Double DIN trim plate. (Figure A)
- 2 Slide the appropriate side bracket over the mounting legs of the Double DIN trim plate aligning the holes in the trim plate and the bracket. (Figure B)
- 3 Slide the DDIN radio unit into the trim plate bracket assembly and secure the unit to the kit using the screws supplied with the head unit. (Figure C)

### NOTE:


The notch in the housing should be on top.

*Continue to final assembly.*


A

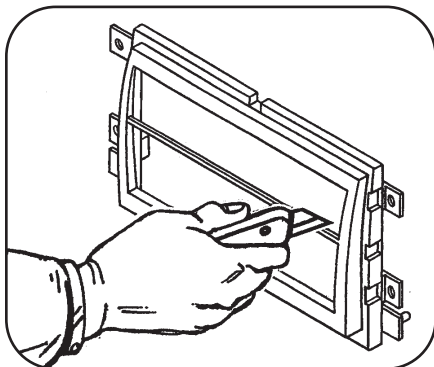

B

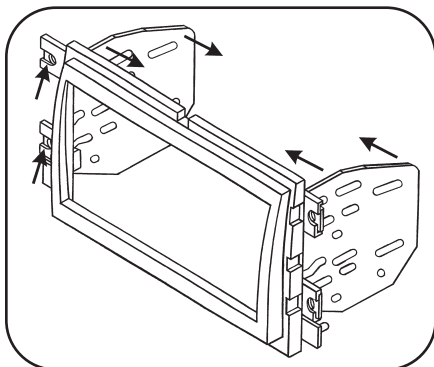

C

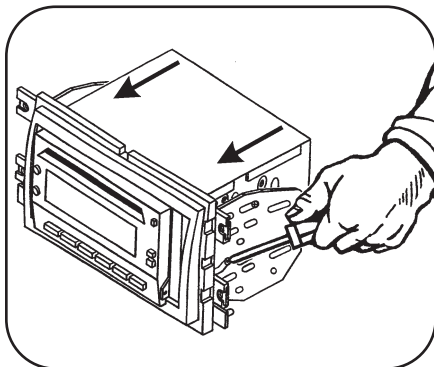

## STACKED ISO UNITS PROVISION



***\*Note:** Refer also to the instructions included with the aftermarket radio.*

- 1 Slide the appropriate side bracket over the mounting legs of the Double DIN trim plate aligning the holes in the trim plate and the bracket. (Figure A)
- 2 Slide the stacked ISO DIN units into the trim plate bracket assembly and secure the units to the kit using the screws supplied with the head units. (Figure B)


**3 NOTE:**

The notch in the housing should be on top.

*Continue to final assembly.*

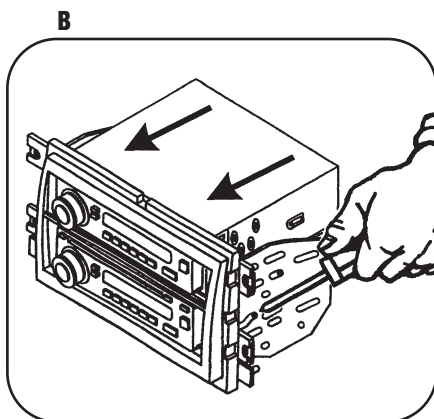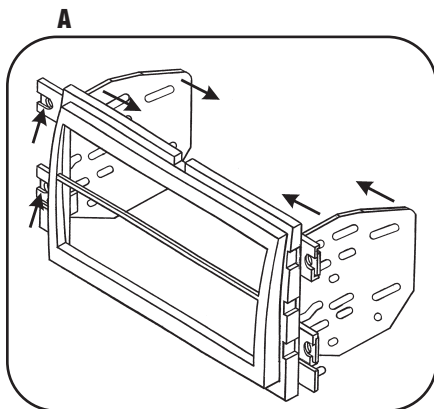

## **FINAL ASSEMBLY**

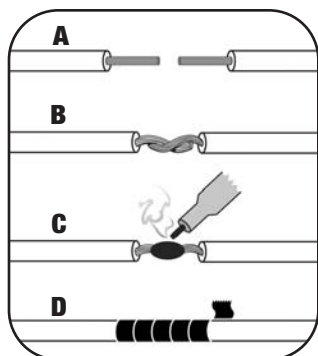

***(A) Strip wire ends back 1/2"***

***B) Twist ends together***

***C) Solder***

***D) Tape***

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Reassemble radio and dash assemblies in reverse order of disassembly.

## **FINAL WIRING CONNECTIONS**

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

### **METRA / EIA WIRING CODE**

12V Ignition / Acc. .... Red	Right Front (+) ..... Gray
12V Batt / Memory. .... Yellow	Right Front (-). .... Gray/ Black
Ground. .... Black*	Left Front (+) ..... White
Power Antenna. .... Blue	Left Front (-). .... White / Black
Amp Turn-On ..... Blue / White	Right Rear (+) ..... Violet
Amp Ground. .... Black / White	Right Rear (-). .... Violet / Black
Illumination ..... Orange	Left Rear (+) ..... Green
Dimmer ..... Orange / White	Left Rear (-) ..... Green / Black

**\*NOTE:** When a Black wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.

This image shows a single sheet of white paper with horizontal ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.



**99-5807**

## NOTES

This image shows a single sheet of white paper with horizontal blue or grey ruling lines. The lines are evenly spaced and run across the width of the page. There are no margins, text, or other markings on the paper.

[illegible]

## **99-5807 INSTRUCTIONS**



**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**

REV. 08/05/08 © COPYRIGHT 2004-2008 METRA ELECTRONICS CORPORATION INST99-5807