

Metra**99-7866****INSTALLATION INSTRUCTIONS****VEHICLE APPLICATIONS****2001-UP ACURA MDX****KIT FEATURES**

- DIN head unit provisions with pocket
- ISO head unit provisions with pocket

KIT COMPONENTS

Housing



Trimplate



ISO Snap In Brackets



Brackets

To Hold Display Above Radio

**TOOLS REQUIRED**

Phillips screwdriver
Flat blade screwdriver (small)



Socket Wrench

**QUESTIONS?**

Call the Help Line: **(800)253 TECH**
 Monday - Friday 9:00 am - 7:00 pm EST
 Saturday - Sunday 10:00 am - 4:00 pm EST

• DASH DISASSEMBLY	
- Acura MDX	1
• KIT ASSEMBLY	
- Display Unit Assembly	2
- DIN Head Unit Provision	3
- ISO DIN Head Unit Provision	4
• FINAL ASSEMBLY	5

ACURA MDX

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove trim panel around radio/display including a/c vents. (Figure A.)
- 3 Remove (6) mounting screws and remove the audio/display unit from the dash. (Figure B.)
- 4 Remove (8) screws from the audio unit and (6) screws from the display unit and remove the brackets from the audio/display assembly.

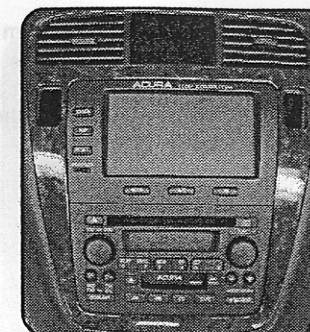


Figure A



Figure B

Display Unit Assembly

- 1 Using the mounting screws from the display unit, attach the brackets supplied with the kit by aligning the guide pins on the display with the holes on the bracket. (Figure A.)
- 2 Align guide pins on bottom of display unit with holes on top of housing and attach the unit to the housing using the (2) screws previously removed. (Figure B.)

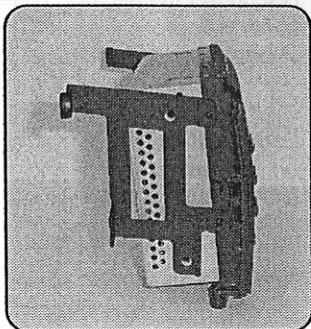


Figure A

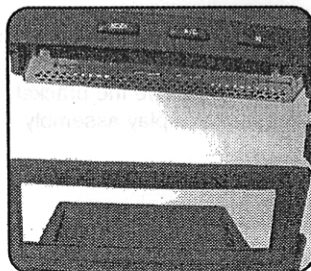


Figure B

DIN Head Unit Provision

- 1 Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. (Figure A.)
- 2 Slide the aftermarket head unit into the cage and secure. Snap the Trimplate into the housing.

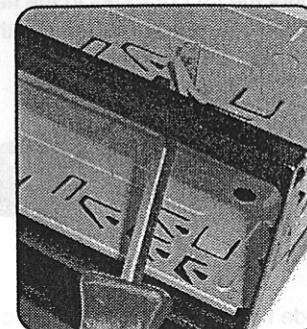


Figure A

ISO DIN Head Unit Provision

- 1 Mount the ISO Brackets to the head unit with the screws supplied with the unit. (Figure A.)

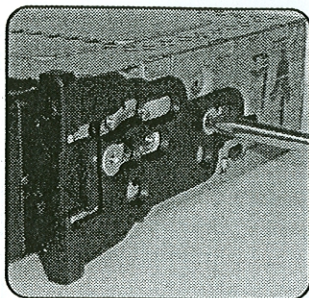
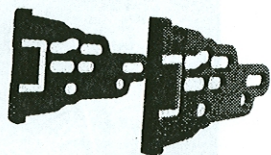


Figure A

- 2 Slide the head unit into the radio opening until the side clips engage. Snap the Trimplate into the radio housing. (Figure B.)

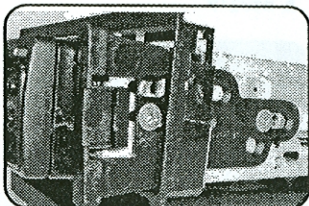


Figure B

Wiring and Re-connection Assembly

- 1 Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit. See Figure A)
- 2 Re-connect the negative battery terminal and test the unit for proper operation.
- 3 Re-assemble radio and dash assemblies in reverse order of disassembly.

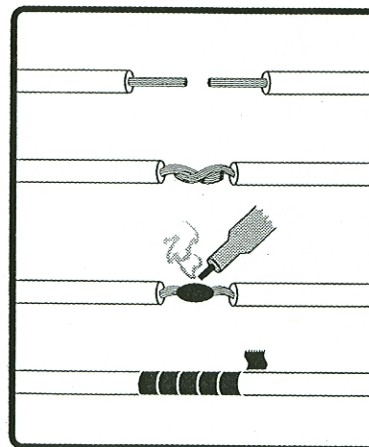


Figure A

A) Strip wire ends back 1/2"

B) Twist ends together

C) Solder

D) Tape