



INSTALLATION INSTRUCTIONS FOR PART 99-8155

APPLICATIONS

1997-2001 Lexus ES Series

99-8155




KIT FEATURES

- DIN Head Unit Provisions with Pocket
- ISO DIN Head Unit Provisions with Pocket

KIT COMPONENTS

A) Radio Housing | B) ISO Brackets | C) Radio Housing Brackets | D) Trim Plate

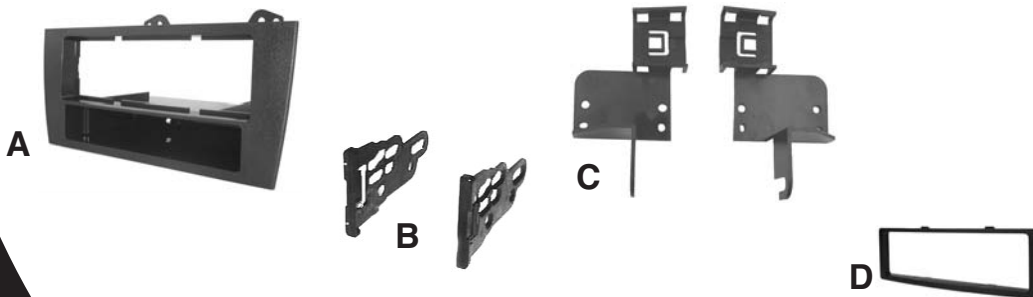

TOOLS REQUIRED:

Small Flat Blade Screwdriver | Phillips Screwdriver | Socket Wrench



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004 METRA ELECTRONICS CORPORATION



99-8155

TABLE OF CONTENTS

• <i>Dash Disassembly</i>	
- <i>1997-2001 Lexus ES Series</i>	<i>1</i>
• <i>Kit Assembly</i>	
- <i>1997-2001 Lexus ES Series</i>	<i>2</i>
- <i>DIN Head Unit Provision</i>	<i>3</i>
- <i>ISO DIN Head Unit Provision</i>	<i>3</i>
• <i>Final Assembly</i>	<i>4</i>
• <i>Notes</i>	<i>5</i>

1997-2001 Lexus ES Series

DASH DISASSEMBLY

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Carefully pry out and remove small trim panel between ashtray and bottom of climate control. (Figure A)
- 3 Using a small flat blade screwdriver gently pry out on the top of the A/C vent assembly (including clock) and remove (Figure B)
- 4 Remove (4) retaining screws securing factory radio to remove. (Figure C)
- 5 Remove (4) retaining screws securing factory climate control to bracket assembly. (Figure D)

A




B



C





D

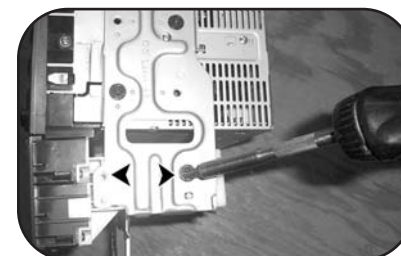

KIT ASSEMBLY**1997-2001 Lexus ES Series**

- 1** Attach the corresponding bracket to the factory climate control using the factory hardware. (Figure A)
- 2** Slide the factory climate control and bracket assembly onto the 99-8155 housing until side clips engage. (Figure B)

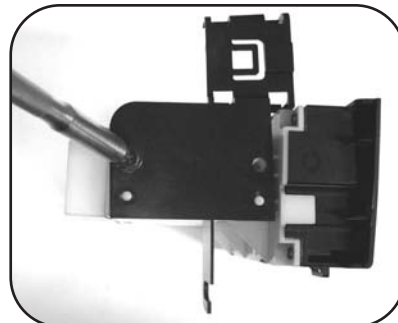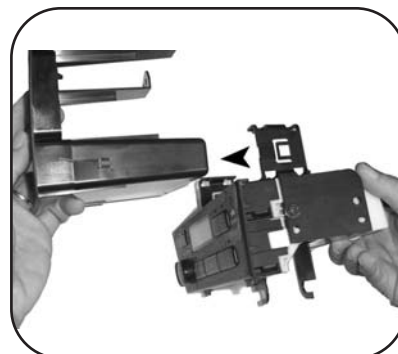A**B**


DIN HEAD UNIT PROVISION

- 1** Slide the DIN cage into the Radio Housing and secure by bending the metal locking tabs down. **(Figure A)**
- 2** Slide the aftermarket head unit into the cage and secure.
- 3** Snap the Trim plate into the Radio Housing.


A

ISO DIN HEAD UNIT PROVISION

- 1** Mount the ISO Brackets to the head unit with the screws supplied with the unit.
- 2** Slide the head unit into the radio opening until the side clips engage. **(Figure A)**
- 3** Snap the Trim plate into the Radio Housing.

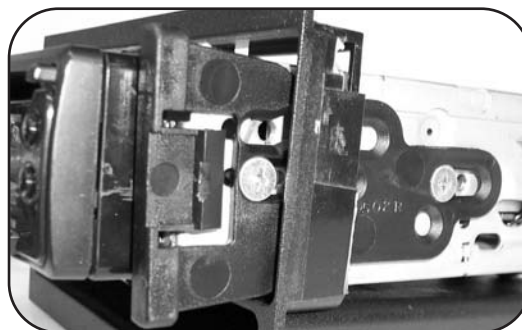A

FINAL ASSEMBLY

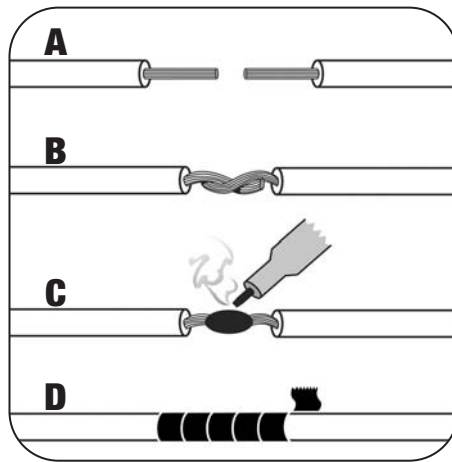

- A) Strip wire ends back 1/2"**
- B) Twist ends together**
- C) Solder**
- D) Tape**

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making the connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit)
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Reassemble in reverse order of disassembly.

99-8155

NOTES

INST998155



1-800-221-0932



www.metraonline.com

© COPYRIGHT 2004 METRA ELECTRONICS CORPORATION