



The RocsAudio AUXMOST module is an auxiliary audio input interface for 2005 to present Audi 2G 3G, BMW CCC CIC, Porsche PCM2.0 2.1, and Mercedes vehicles equipped with the MOST fiber optic network. The module can be installed in any position within the fiber optic loop.

**Attention: All Wire Connections Made during Installation should Be Soldered**

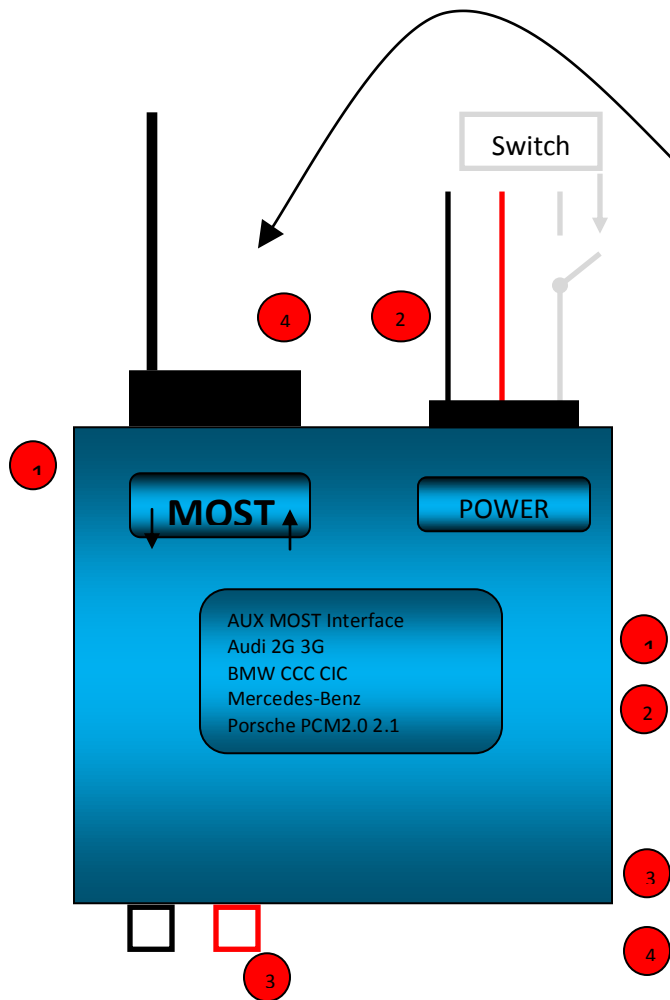

### Fiber Optic Loop Configuration

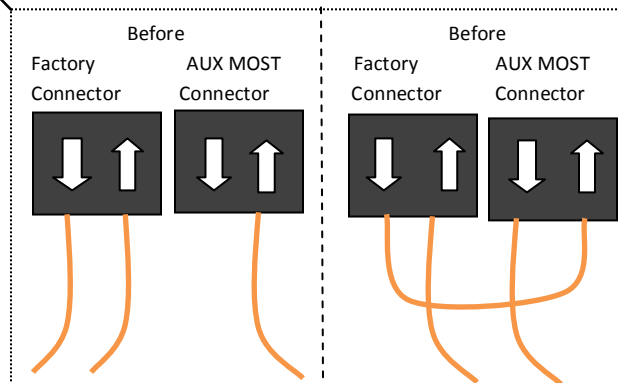

### Kit Includes the Following Components:

- 1 Aux-MOST Interface Module
- 2 8-Pin Connector w/the following wires:  
Red Wire (Connect to a +12 Volts Constant)  
Black Wire (connect to a Chassis Ground)  
White Wire (connect to a +12 Volt Switched w/ a toggle switch)
- 3 Stereo Audio RCA Inputs
- 4 Fiber optic cable and connector (refer to above diagram for fiber optic wiring)

### MOST-Aux Operation:

Once all of your wire connections are secured and soldered, you are now ready to install your audio source. After installing your desired audio source, activation of the interface is quite simple. Placing the toggle switch (not supplied) in the ON position will interrupt all audio playing through your factory radio and allows your auxiliary audio source to be heard. To deactivate your auxiliary audio input and retain factory radio functions, simply place the toggle switch in the OFF position.

**SWITCH NOT INCLUDED SOLD SEPERATLY**