

SOHTL-20

LEXUS

2006 - 2009 GS

2004 - 2008 RX330/350

2006 - 2008 RX400h

TOYOTA

2005 - 2011 4Runner RDS

2003 - 2004 4Runner

2005 - 2011 Avalon

2007 - 2011 Camry

2007 - 2011 FJ Cruiser

2005 - 2008 Highlander

2009 - 2011 Matrix

2006 - 2011 RAV-4

2003 - 2011 Sequoia

2004 - 2011 Sienna

2004 - 2011 Solara

2005 - 2008 Tacoma

2003 - 2011 Tundra

2009 - 2011 Venza

RADIO REPLACEMENT INTERFACE FOR SELECT LEXUS/ TOYOTA VEHICLES 2003-2011

We recommend reading this installation guide first before starting any work. Following these instructions from "Start" to" Finish" will ensure a smooth and hassle free installation. We offer telephone support M-F 9:00 AM - 5:00PM PDT at 1 (855) 822-1348. We are here to help

PARTS INCLUDED:

- (1) Interface Module
- (1) TOY/LEXUS Harness
- (1) Instruction Sheet

PRECAUTIONS:

- Remove the negative side of the battery to avoid any short circuits durring the installation.
- Do not install the interface near any major components or near the HVAC system. This may cause damage or overheating to the vehicle.

PRELIMINARY:

Please read the entire mannual before installing this interface. This unit provides the following:

- 12V Acc Output


Before installing this interface please review the options before removing the factory radio. Some options may need to be adjusted prior to removing the factory radio. Options include:

- Premium Sound, JBL System,


OVERVIEW OF INSTALLATION

MATCH LOOSE WIRES TO AFTERMARKET RADIO



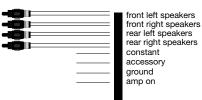



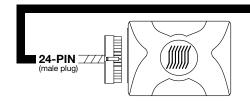

WIRING COLOR CODES

Black	= Ground	
Red	= Accessory	
Yellow	= Constant	
Blue/White	= Amplifier Turn-On	
White RCA	= Left Front	
Gray RCA	= Right Front	
Green RCA	= Left Rear	
Purple RCA	= Right Rear	

The color code section above is using the industry standard E.I.A. color codes.

INSTALLATION TIPS

- 1. Make sure the vehicle recognizes the interface, turn the key to the "RUN" position for 2 seconds, then turn the key to the "OFF" position. Then repeat. We recommend doing this twice to confirm.
- 2. Make sure you have the correct amount of RCA inputs on your new aftermarket radio prior to installation. If not enough RCA inputs, we recommend purchasing a "Y" splitter. See your local car audio specialist.
- 3. Before removing the factory radio, make sure to set the balance and fader to zero (center) and set the volume level between levels 10 and 20

IMPORTANT NOTES:

NOT FOR USE ON MARK LEVINSON PREMIUM SOUND SYSTEMS.

INTERFACE DOES NOT RETAIN: - FACTORY SATELLITE RADIO

FACTORY STEERING WHEEL CONTROLS