



VIMAD-84



Audi

2009 - 2014 A5
 2009 - 2014 A6
 2010 - 2014 A7
 2010 - 2014 A8
 2009 - 2014 Q5
 2009 - 2014 Q7
 2009 - 2014 S5

Volkswagen

2010 - 2014 Touareg

VIDEO IN-MOTION ACTIVATION FOR AUDI MMI 2G/3G/3G+ & VOLKSWAGEN RNS850 NAV RADIOS

We recommend reading this installation guide first before starting any work. Following these instructions from "Start" to "Finish" will ensure a smooth and hassle free installation. We offer telephone support M-F 9:00 AM - 5:00PM PDT at 1 (855) 822-1348. We are here to help.

PARTS INCLUDED:

- (1) AD-84 Interface
- (1) AD-84 Fiber Optic Harness
- (1) Instruction

PRECAUTIONS:

- Remove the negative side of the battery to avoid any short circuits during the installation.
- Do not install the interface near any major components or near the HVAC system. This may cause damage or overheating to the vehicle.
- **Do not disconnect the airbag connection behind the radio panel.**

PRELIMINARY:

Please read the entire manual before installing this interface.

Vehicle must be equipped with factory DVD changer.

This interface does not activate DVD reader.

IMPORTANT:

ONLY COMPATIBLE WITH AUDI MMI 2G/3G/3G+ RADIOS. AND VOLKSWAGEN RNS850 NAV SYSTEMS.

SAFETY WARNING:



THIS INTERFACE IS DESIGNED TO ACTIVATE VIDEO IN-MOTION TO ALLOW THE PASSENGER ACCESS TO THE ADDRESS INPUT WHILE THE VEHICLE IS IN-MOTION. THIS INTERFACE MAY CAUSE AN ERROR WHEN SERVICED AT THE OEM DEALER. BE AWARE THAT MOST DEALERS WILL ATTEMPT TO VOID THE MANUFACTURERS WARRANTY WHEN INSTALLING ANY AFTERMARKET EQUIPMENT. IMPROPER USE OF THIS INTERFACE BY THE DRIVER MAY RESULT IN CITATION. DRIVER MUST KEEP FULL ATTENTION ON THE ROAD AND RESPONSIBILITY ON THE SAFETY OF HIS PASSENGERS.

INSTALLING THE INTERFACE:

1. Remove the factory CD-Changer from the glove box to access to the connectors, If no CD-Changer, remove the factory radio.
2. If used on a non CD-Chnager style of vehicle, please connect the RED and BLACK wires as directed. (See Installation Overview)
3. Remove the fiber-optic cable from the factory connector.
4. Make the T-Harness connections behind the factory radio.
(if the connectors do not match please contact tech support)
5. Test and make sure the Reverse gear triggers the interface and also test the video in-motion while the car is rolling.
(Navigation address input should be active while rolling)
6. Make all other connections before re-installing the factory radio.

NOTE: To deactivate the Video In-Motion, please connect the BLUE wire to 12v.

INSTALLATION OVERVIEW

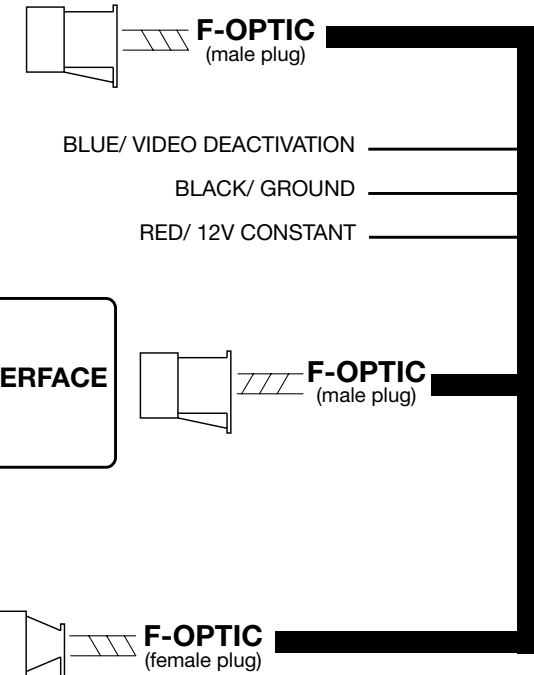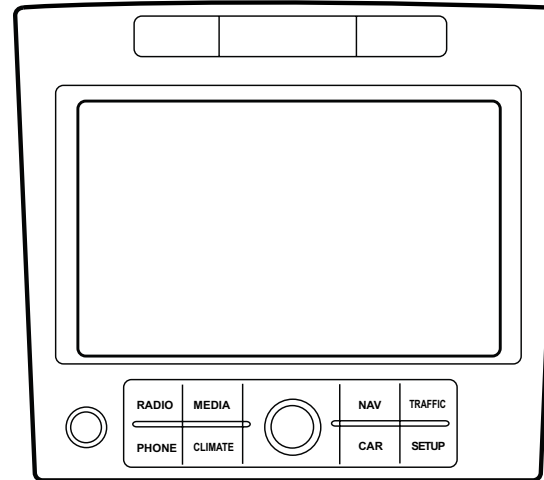

ONLY COMPATIBLE WITH:
 - AUDI MMI 2G/3G/3G+ RADIOS.
 - VOLKSWAGEN RNS850 NAV