



## INSTALLATION INSTRUCTIONS FOR PART 95-7323

### APPLICATIONS

**Hyundai Entourage 2007**

**Kia Sedona 2006-07**

# 95-7323


#### KIT FEATURES

- Double DIN radio provision
- Stacked ISO Units provision




#### KIT COMPONENTS

- A) Double DIN Trim Plate • B) Double DIN Brackets

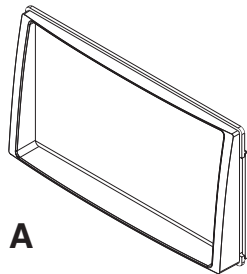



A

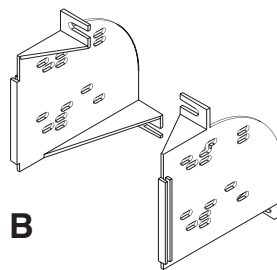

B

#### TOOLS REQUIRED:

- Phillips Screwdriver • Small Flat Blade Screwdriver Or Panel Removal Tool



**1-800-221-0932**



**www.metraonline.com**

© COPYRIGHT 2004-07 METRA ELECTRONICS CORPORATION



# TABLE OF CONTENTS

## Dash Disassembly

- **Hyundai Entourage 2007** ..... **1**
- **Kia Sedona 2006-07** ..... **1**

## Kit Assembly




- **Double DIN Radio Provision** ..... **2**
- **Stacked ISO Units Provision** ..... **3**

- **Final Assembly** ..... **4**

## **HYUNDAI ENTOURAGE 2007** **KIA SEDONA 2006-07**

- 1 Disconnect the negative battery terminal to prevent an accidental short circuit.
- 2 Unclip and remove panel surrounding shifter. (Figure A)
- 3 Remove (2) Phillips screws at bottom corners of panel surrounding radio. (Figure B)
- 4 Unclip and remove entire panel surrounding radio including the clock and a/c vents. (Figure C)
- 5 Remove (4) Phillips screws securing radio.
- 6 Unplug and remove the radio.



*Continue to kit assembly.*

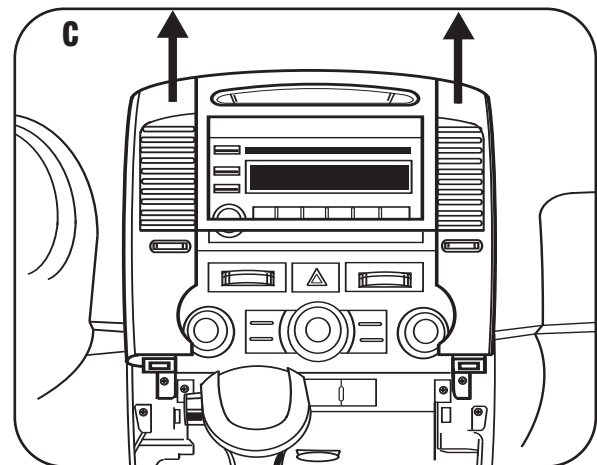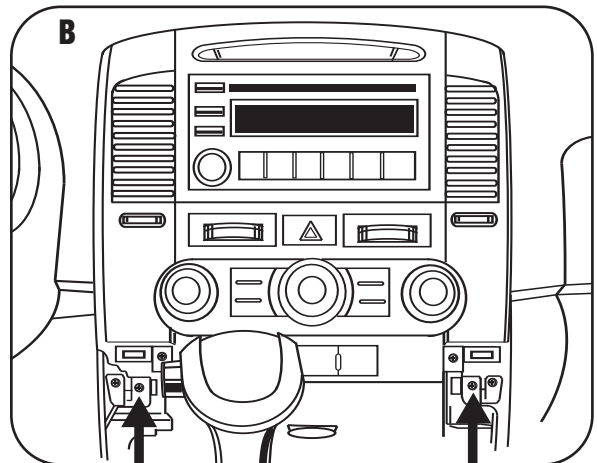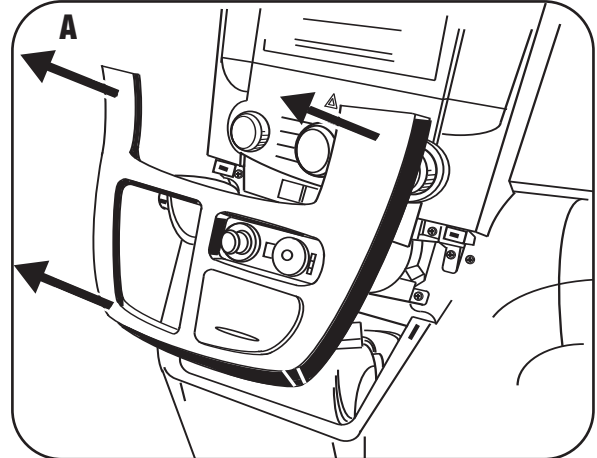

## DOUBLE DIN RADIO PROVISION

- 1** Snap the Double DIN brackets to the inside edge of the Double DIN trim plate. (Figure A)
- 2** Slide the Double DIN radio into the bracket/trim plate assembly and secure the radio to the assembly using the screws supplied with the radio. (Figure B)



*Continue to final assembly.*

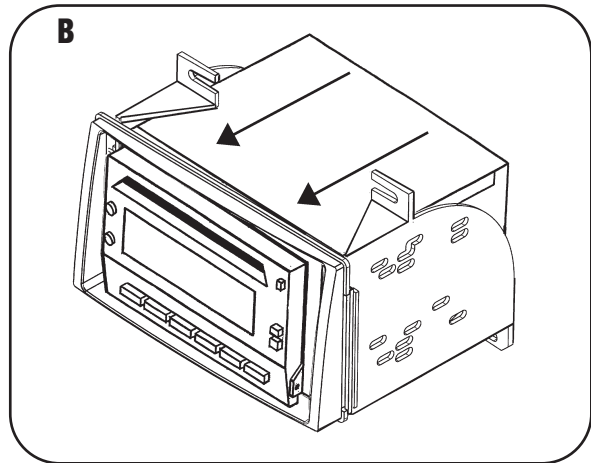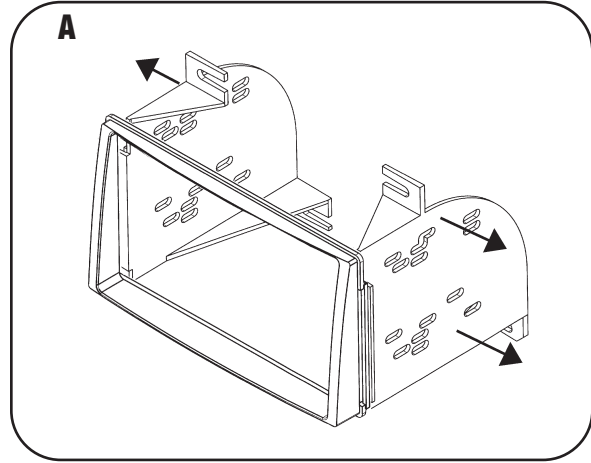


## STACKED ISO UNITS PROVISION

- 1 Snap the Double DIN brackets to the inside edge of the Double DIN trim plate. (Figure A)
- 2 Slide the stacked ISO units into the bracket/radio housing assembly and secure the units to the kit using the screws supplied with the units. (Figure B)

*Continue to final assembly.*

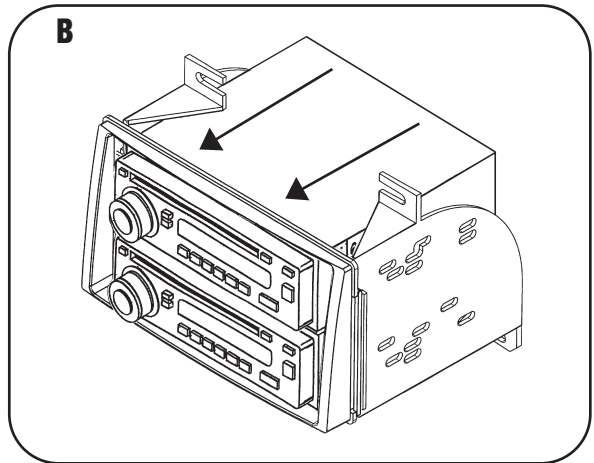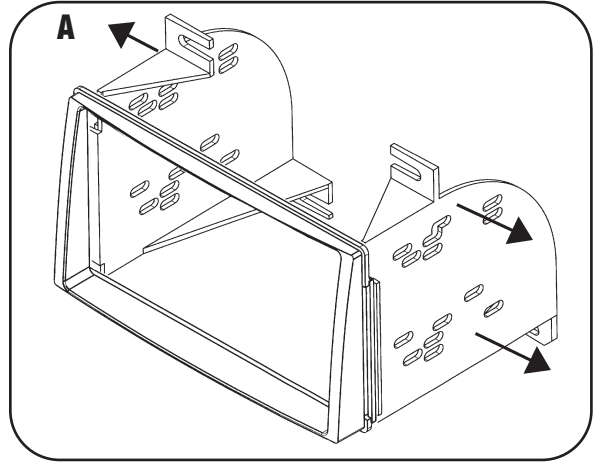

# FINAL ASSEMBLY

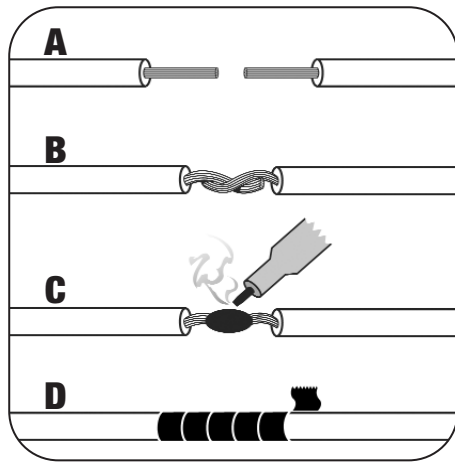

- A) Strip wire ends back 1/2"**
- B) Twist ends together**
- C) Solder**
- D) Tape**

- 1** Locate the factory wiring harness in the dash. Metra recommends using the proper mating adapter and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit.)
- 2** Re-connect the negative battery terminal and test the unit for proper operation.
- 3** Reassemble in reverse order of disassembly.

## FINAL WIRING CONNECTIONS

Make wiring connections using the EIA color code chart shown below and the instructions included with the head unit. Metra recommends making connections as shown below; Strip, Splice, Solder, Tape. Isolate and individually tape off ends of any unused wires to prevent electrical short circuit.

### METRA / EIA WIRING CODE

12V Ignition / Acc . . . Red	Right Front (+) . . . . Gray
12V Batt / Memory . . Yellow	Right Front (-). . . . . Gray/ Black
Ground . . . . . Black*	Left Front (+) . . . . . White
Power Antenna . . . . . Blue	Left Front (-). . . . . White / Black
Amp Turn-On . . . . . Blue / White	Right Rear (+). . . . . Violet
Amp Ground . . . . . Black / White	Right Rear (-) . . . . . Violet / Black
Illumination. . . . . Orange	Left Rear (+). . . . . Green
Dimmer . . . . . Orange / White	Left Rear (-) . . . . . Green / Black

**\*NOTE:** When a Black wire is not present, ground radio to vehicle chassis.

All colors may not be present on all leads due to manufacturer's specifications.



# 95-7323 INSTRUCTIONS



**1-800-221-0932**



**[www.metraonline.com](http://www.metraonline.com)**

REV. 06/18/07

© COPYRIGHT 2004-07 METRA ELECTRONICS CORPORATION

INST95-7323