



Mount the climate control pod to the back of the dash trim bezel with (3) Phillips screws previously removed in step #2.

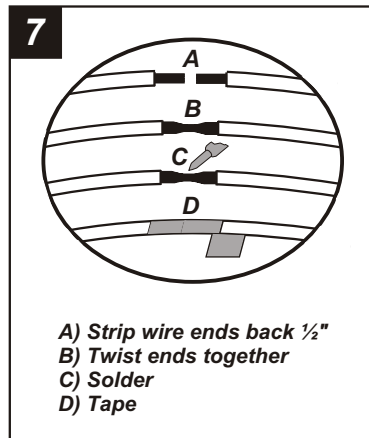

Locate the factory wiring harness in the dash. Metra recommends using the proper mating adaptor and making connections as shown. (Isolate and individually tape off the ends of any unused wires to prevent electrical short circuit).



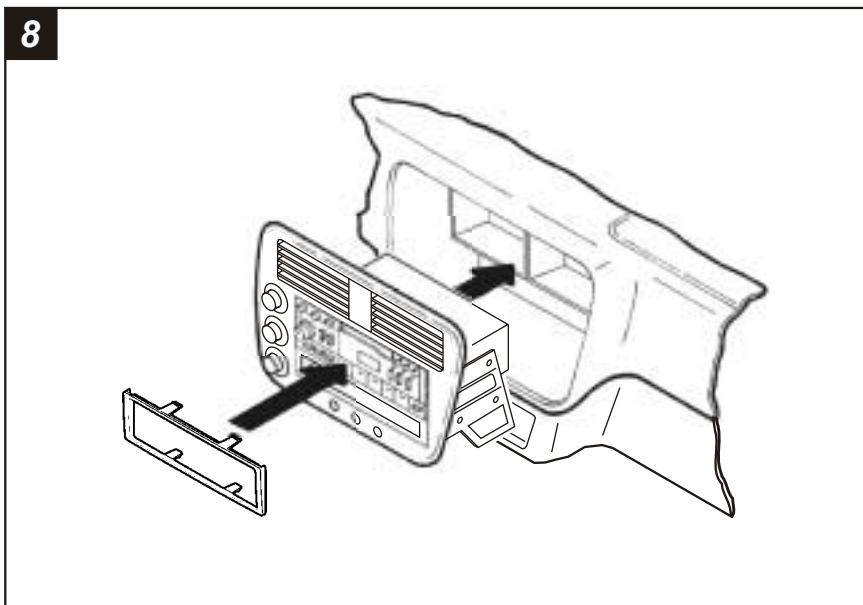


Re-connect the battery terminal and test the unit for proper operation. Snap the **Trimplate** over the mounted head unit. Slide the dash trim bezel assembly into the sub-dash until secure.

KIT FEATURES

- ISO and DIN head unit provisions
- Pocket

KIT COMPONENTS

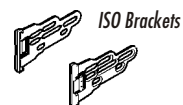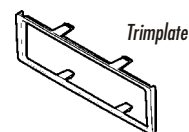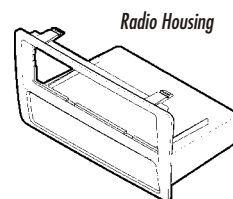

TOOLS REQUIRED



99-7899 INSTALLATION INSTRUCTIONS

APPLICATIONS


CAR
HONDA

Civic 2001-2003.....1-3


PAGE




ALL VEHICLES

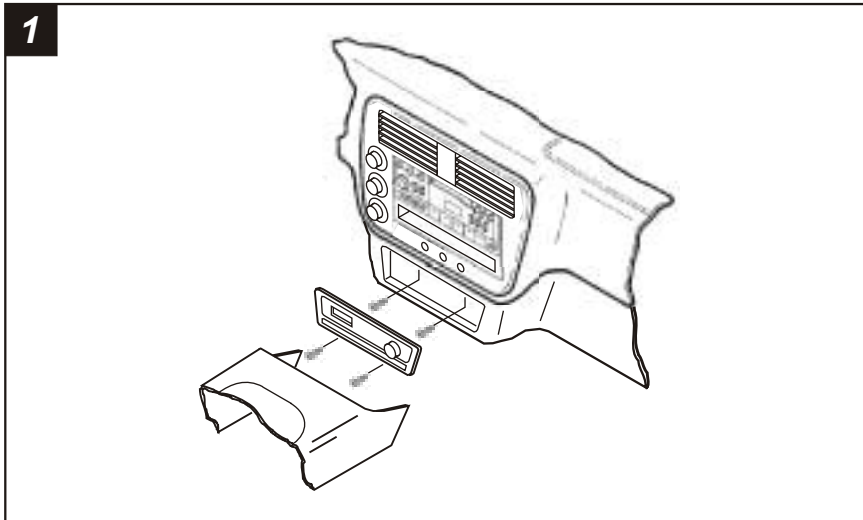


Disconnect the negative battery terminal to prevent an accidental short circuit. Unclip the parking brake trim panel and remove (2) Phillips screws exposed. Remove (1) plastic clip and (1) Phillips screw from each side of the center console. Slide the center console toward the back of the vehicle to access (2) Phillips screws on the power outlet panel. Unclip the power outlet panel and remove (2) Phillips screws exposed. Unclip the dash trim bezel assembly (including the head unit and climate controls) and remove the assembly.

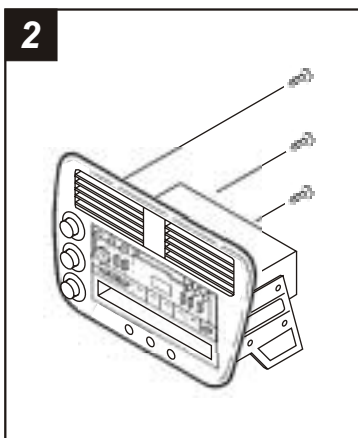


Remove (3) screws securing the climate control pod to the back of the dash trim bezel and remove the pod.

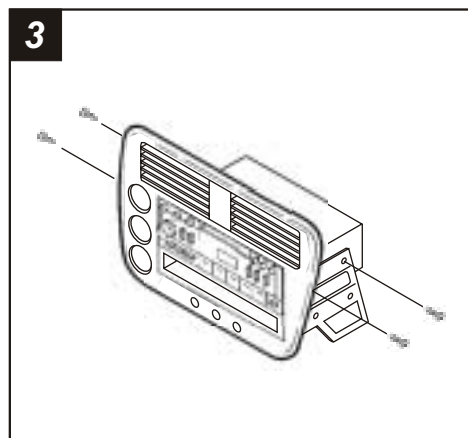

Remove (4) Phillips screws from each side securing the factory head unit to the bracket assembly and remove the unit.

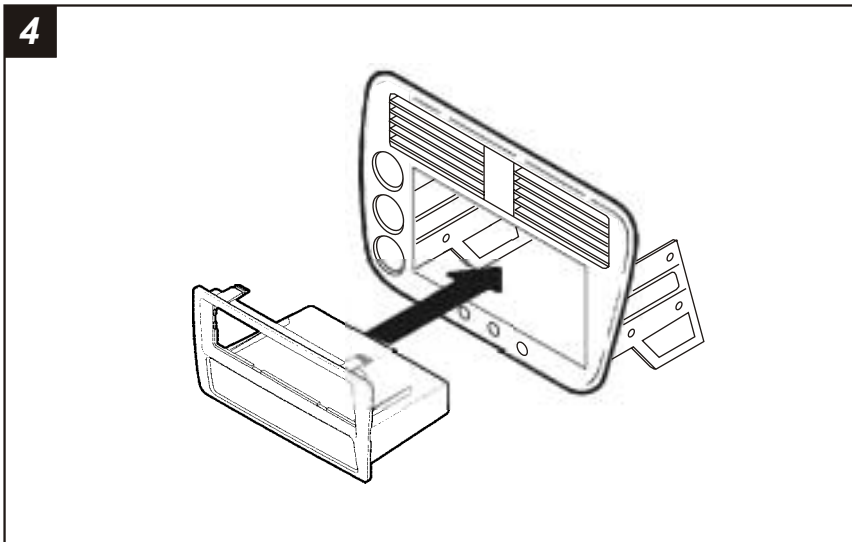

Snap the **Radio Housing** into the sub-dash.

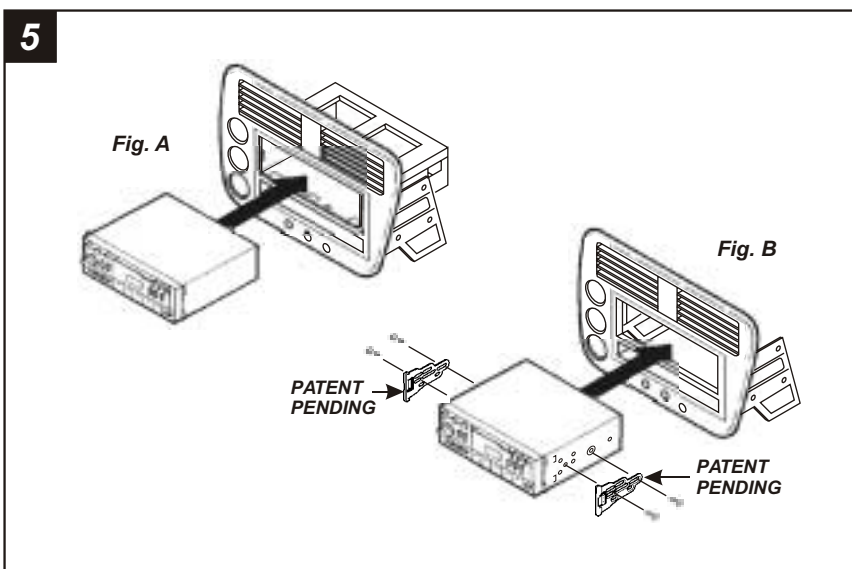

DIN HEAD UNITS: Slide the DIN cage into the **Radio Housing** and secure by bending the metal locking tabs down. Slide the aftermarket head unit into the cage and secure. (see Fig. A)
ISO HEAD UNITS: Align the holes in the **ISO Brackets** with the holes in the head unit and mount the Brackets to the head unit with the screws supplied with the unit. Snap the head unit/bracket assembly into the **Radio Housing**. (see Fig. B).